


MENABO

free time on the move


ICEBERG

IT Istruzioni di montaggio	ET Paigaldusjuhend	PT Instruções de Montagem
EN Fitting instructions	FI Asennusohje	RO Instrucțiuni de montare
DE Montageanleitung	HR Uputa za sastavljanje	RU Инструкции по установке
FR Instructions de montage	HU A felszerelés módja	SK Návod na montáž
ES Instrucciones de montaje	LT Pritvirtinimo instrukcijos	SL Navodila za pritrjevanje
BG инструкции за сглобяване	LV Stiprināšanas instrukcija	SV Monteringsanvisning
CS Návod na montáž	NL Montagehandleiding	TK Uydurma talimat
DA Monteringsvejledning	NO Monteringsanvisning	ZH 裝修指導
EL Οδηγίες συναρμολόγησης	PL Instrukcja montażu	AR كتيب التعليمات


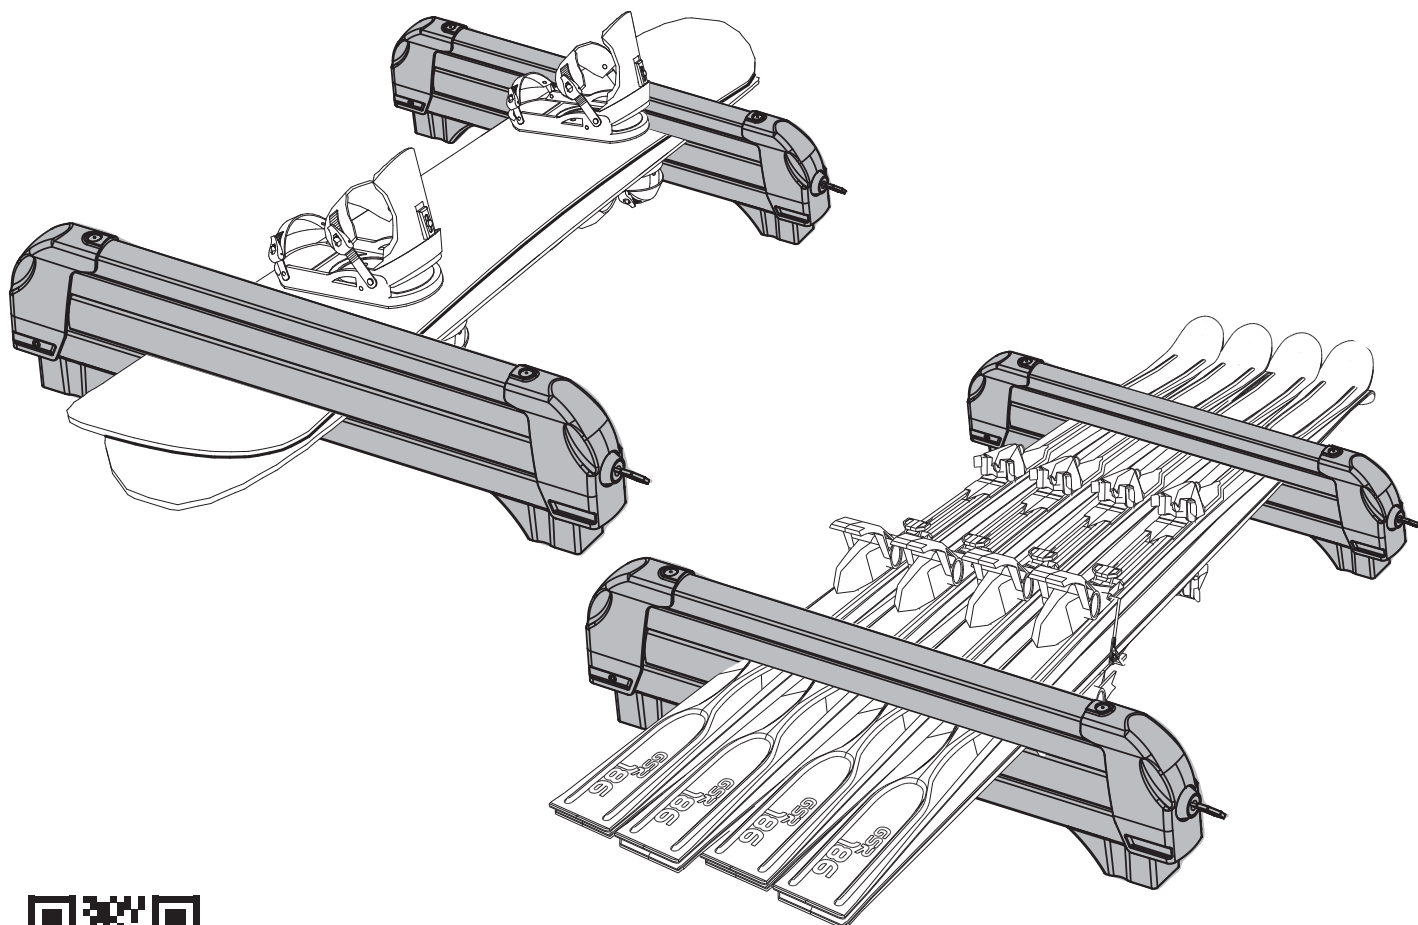


Made in Italy



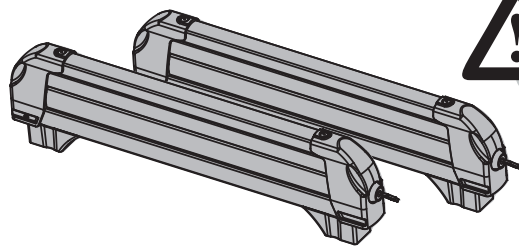


(IT) AVVERTENZE
 EN) WARNINGS
 FR) MISES EN GARDE
 DE) ADVERTENCIAS

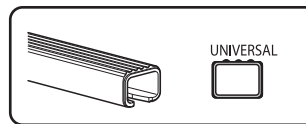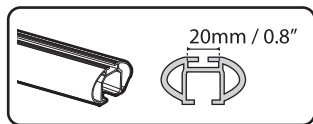


N°	(IT)Componenti (Inclusi) (EN)Components (Included) (FR)Composants (Comprises) (DE)Die Komponenten (im Lieferumfang enthalten) (ES)Componentes (Incluido)	Q.
1		2
2		4
3		4
4		4
5		2
6		1


N°	OPTIONAL KIT 000084700000	Q.
A		8
B		8
C		4
D		4
E		4

N°	(IT)Ricambi (A Richiesta) (EN)Spare Parts (Made to order) (FR)Pièces de rechange (Sur commande) (DE)E Teile (auf Anfrage) (ES)Piezas de recambio (Previa solicitud)	Codice-Code-Código	Q.
2		700023200000	4
3		700023300000	4
4			4
5		700014400000	2
6		700023700000	1
12		700023400000	1


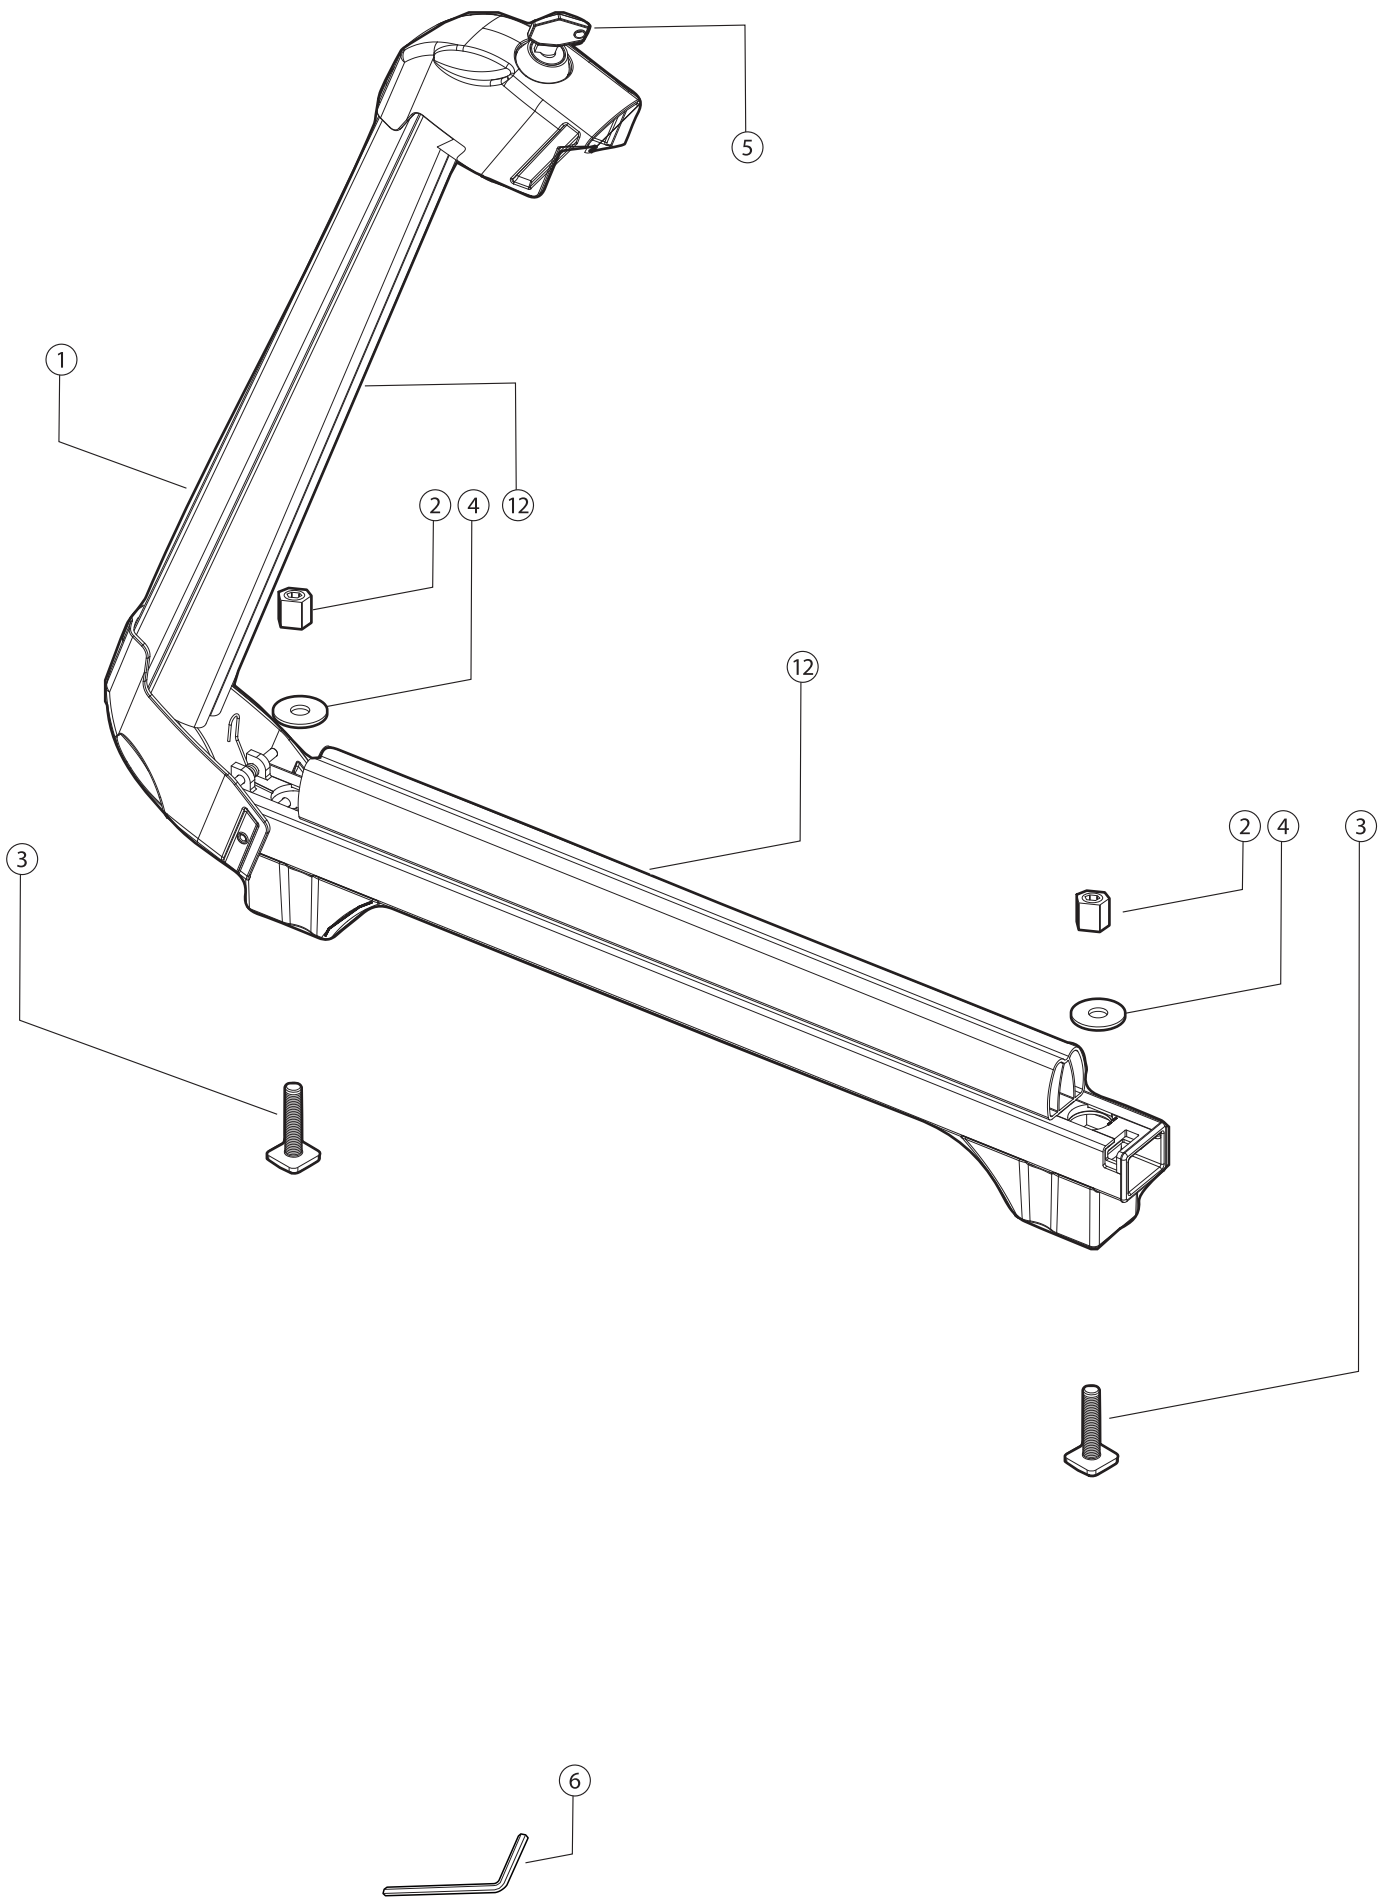


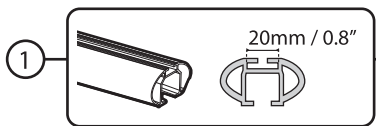

N°		Q.
1		2
2		4
3	20mm/0.8" M6x45	4
4	Ø6x18	4


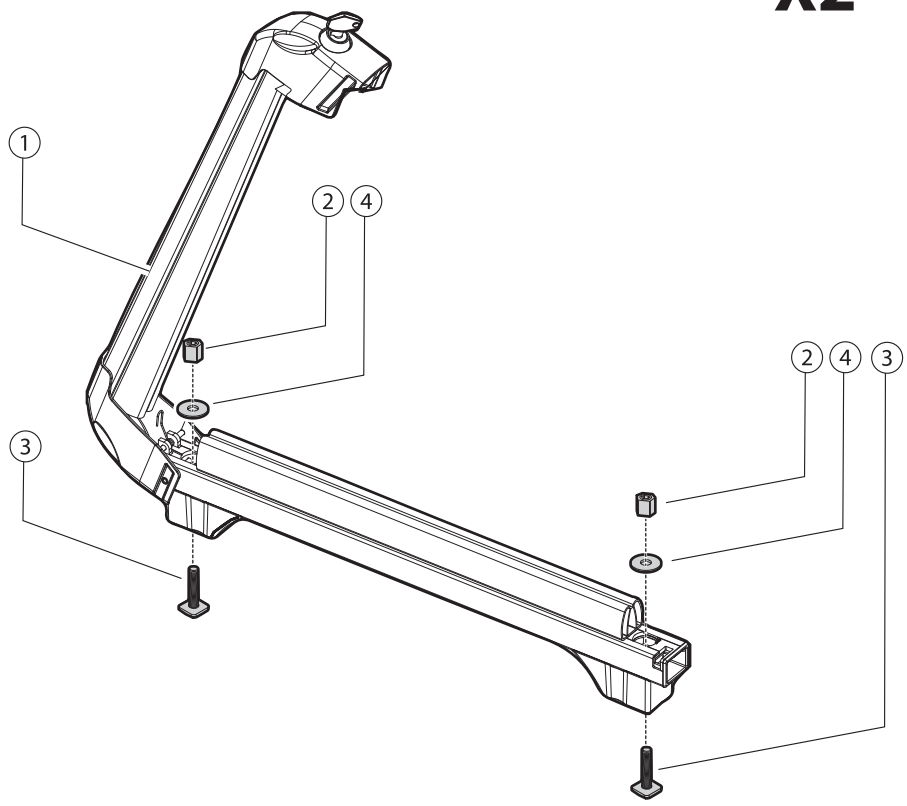


2

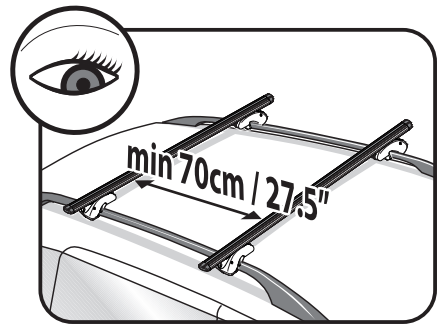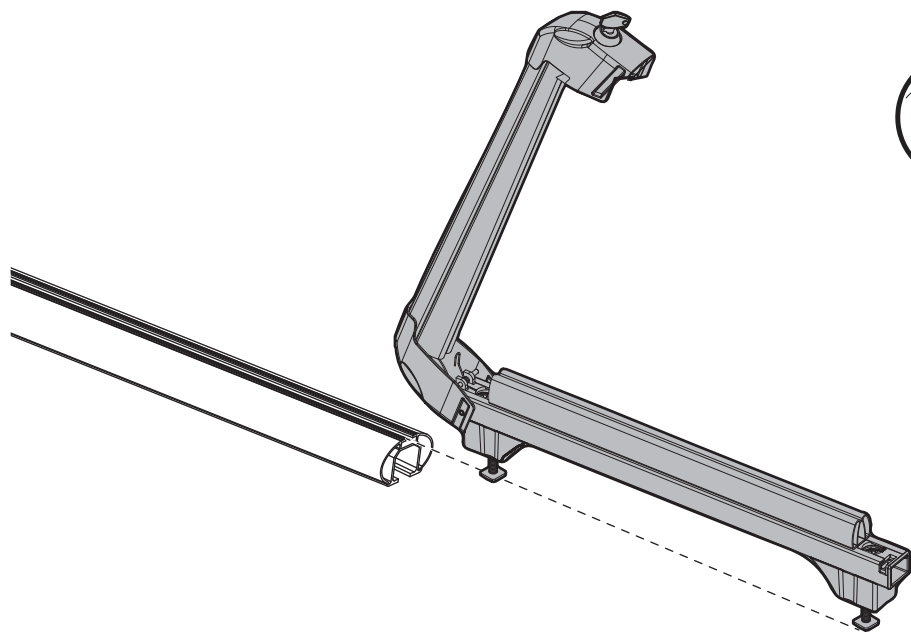


3


N°		Q.
6	6mm - 0.3"	1

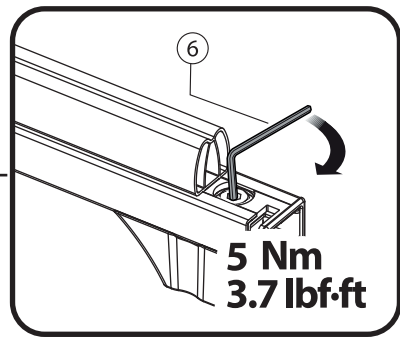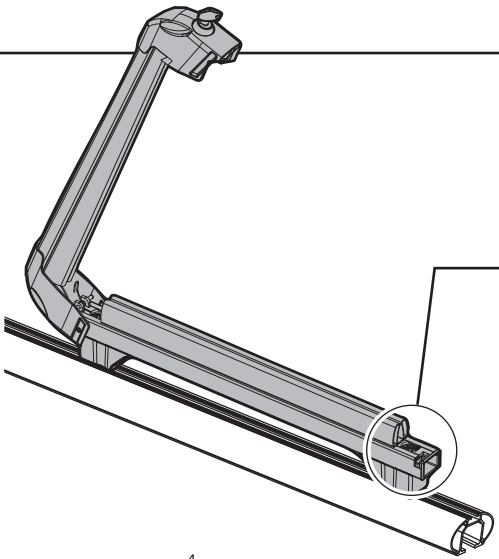


4








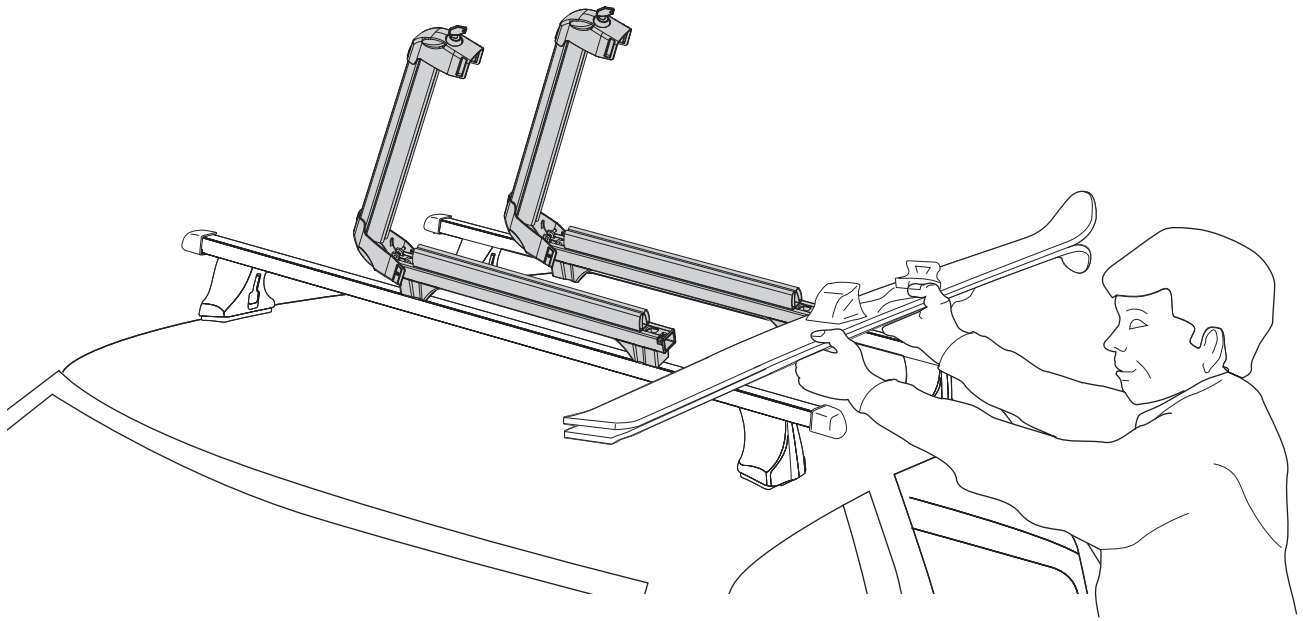


5

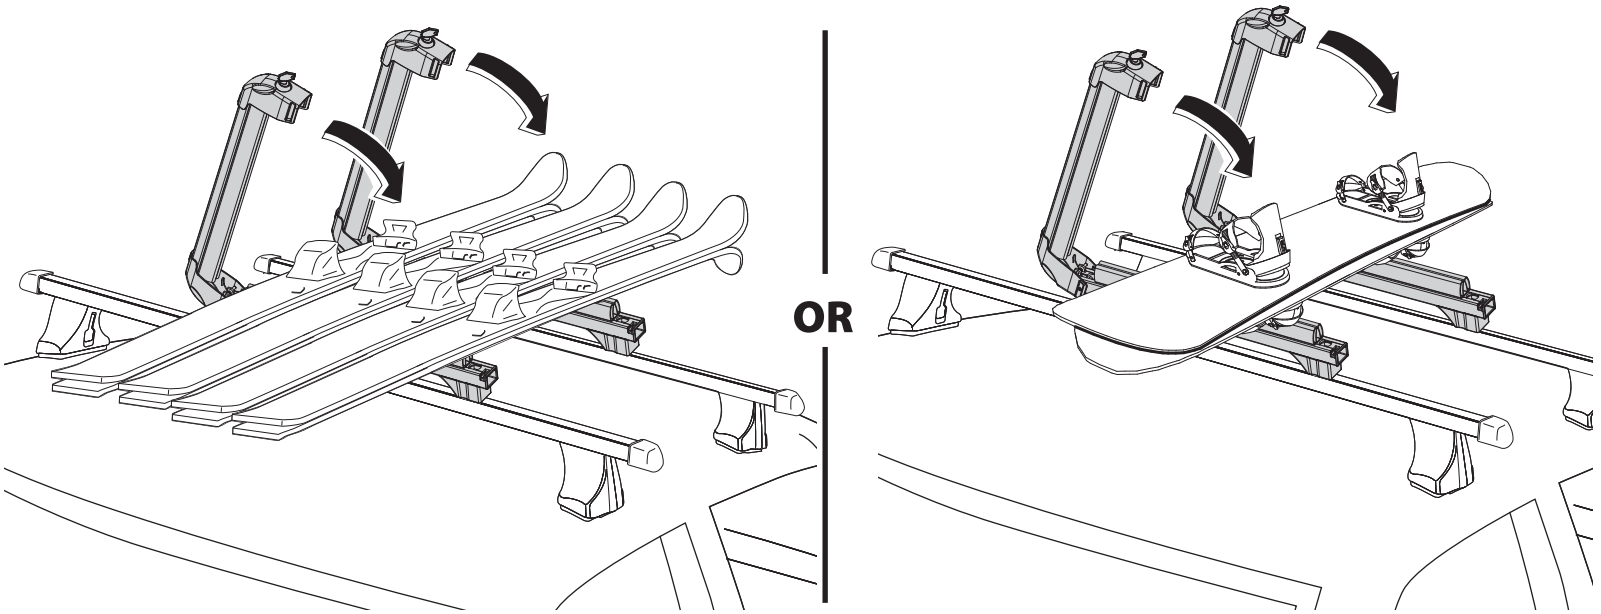

6

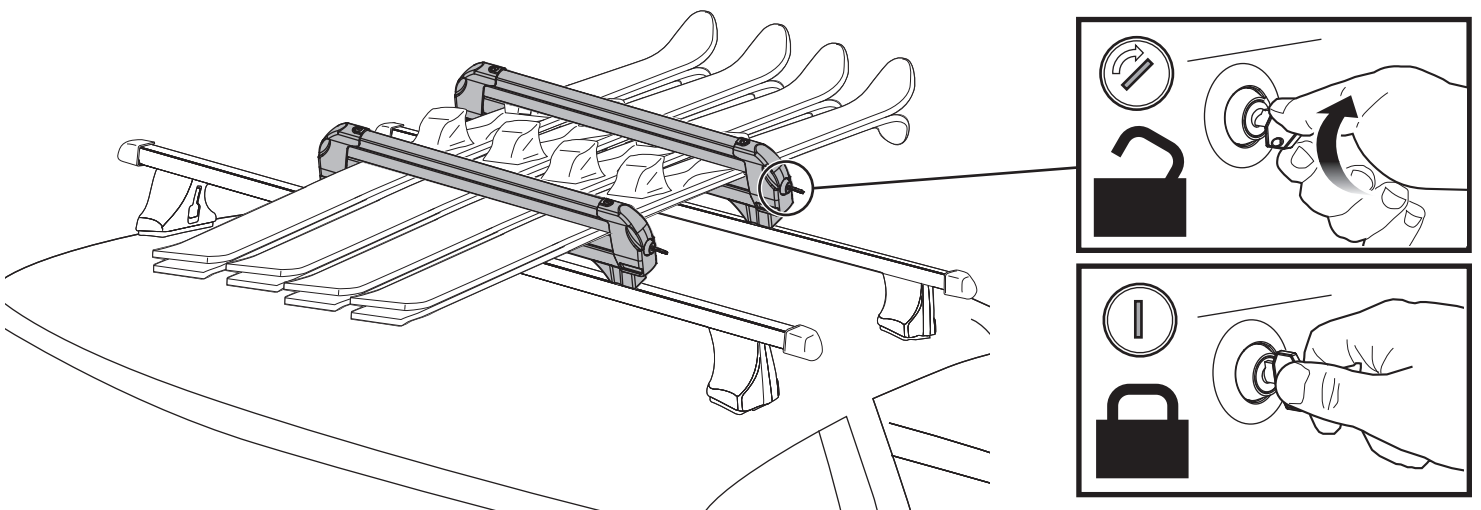

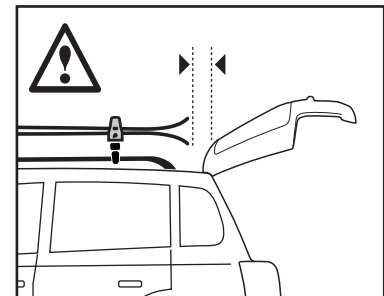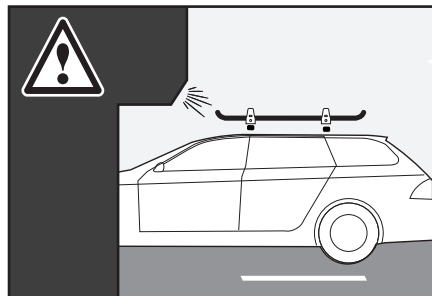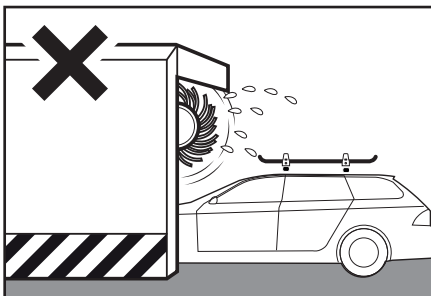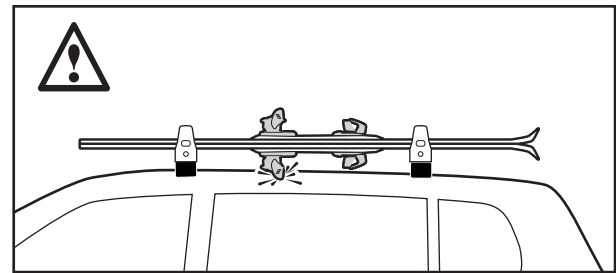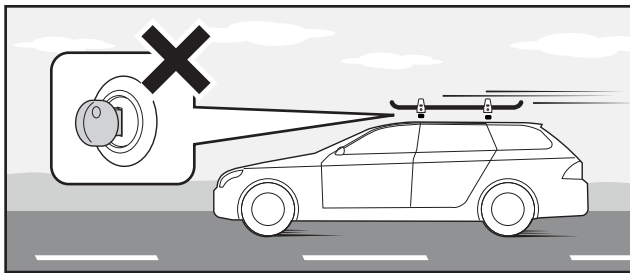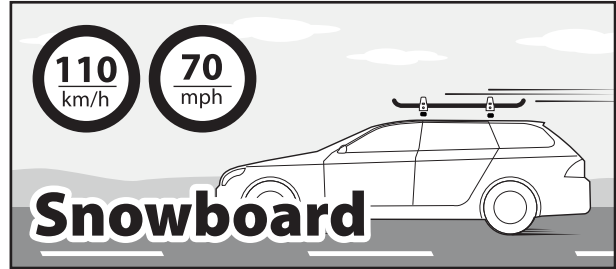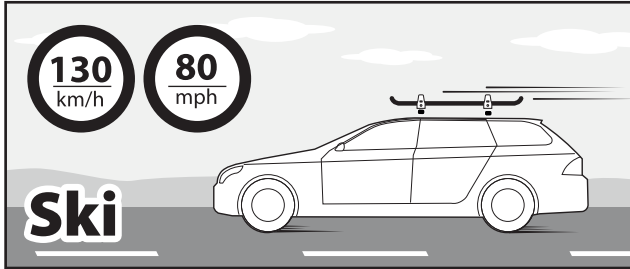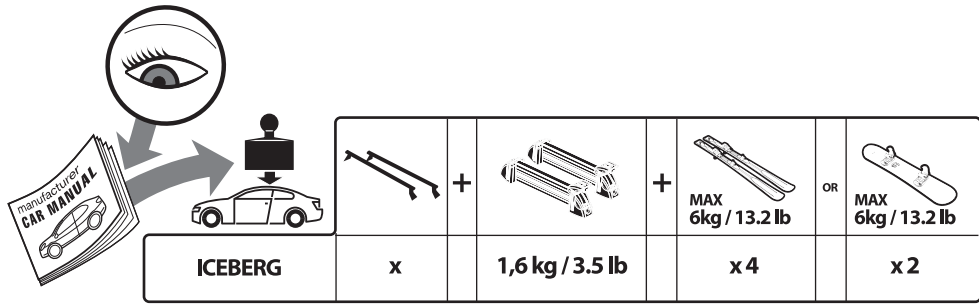



F.lli Menabò S.r.l.
Via 8 Marzo, 3 -Z.I. Corte Tegge
42025 Caviago (RE) ITALY
customercare@flli-menabo.it
www.menabocaraccessories.com



50009600001
05/08/2025