



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01020(A/B/O-TYPE)




MB02020

MB04020

COMPATIBLE VEHICLES



DAC DSTR SUV 18-
REN DSTR SUV 18-

USE OF CN-... PARTS

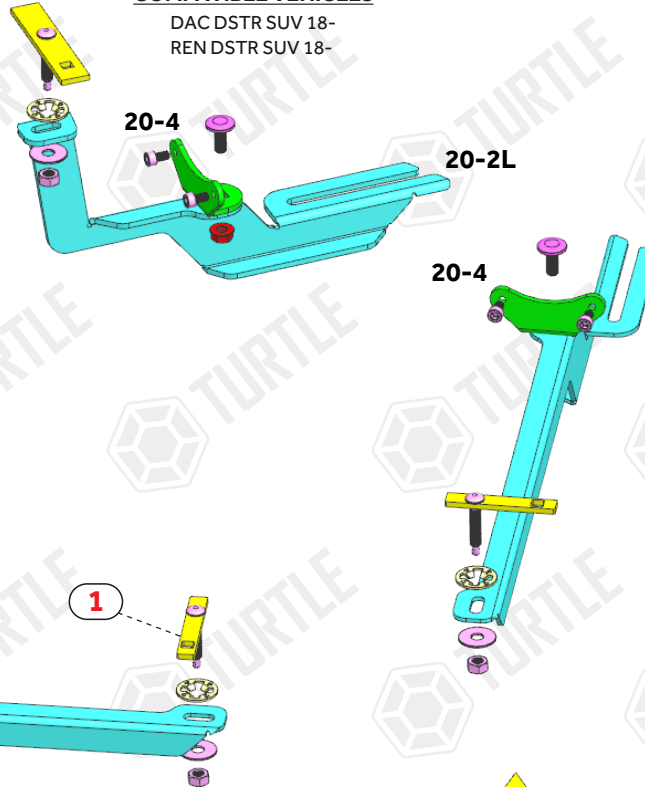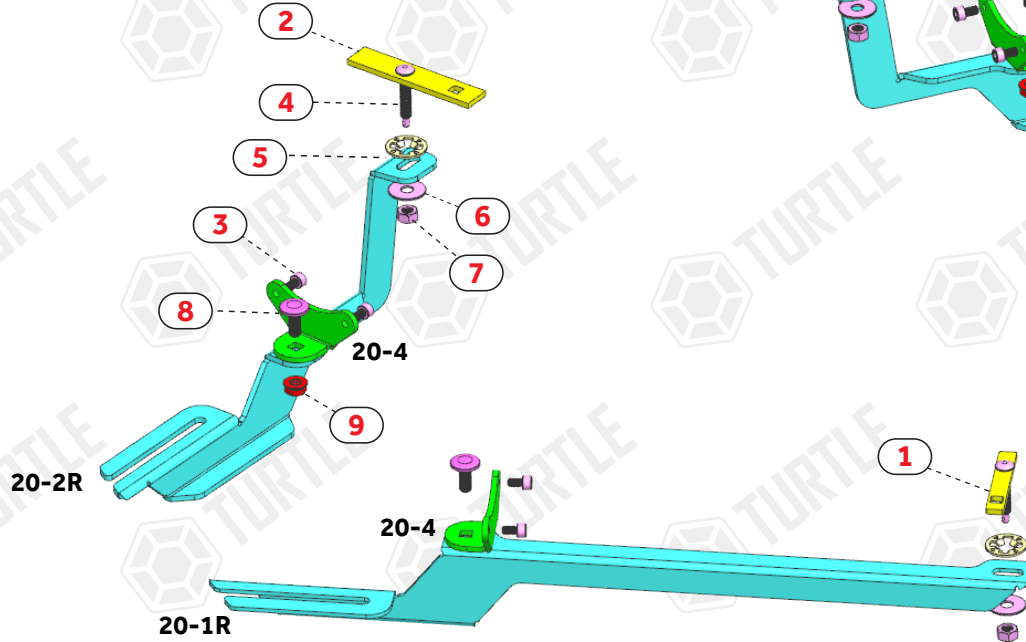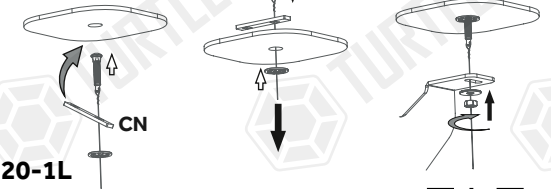

PACKAGE INCLUDED

1- CN-01 M8	2
2- CN-03 M8	2
3- M6x10 INBUS BOLT	8
4- M8 SPECIAL BOLT	4
5- CLAMPING PIECE	4
6- D8 WASHER	4
7- M8 HEX NUT	4
8- M8x20 LOCK HEADED BOLT	4
9- M8 HEX FLANGE NUT	4
10- 5 mm ALLEN WRENCH	1
11- D8 WASHER	8
12- M8x20 SQUARE BOLT	8
13- M8 FLANGE NUT	8

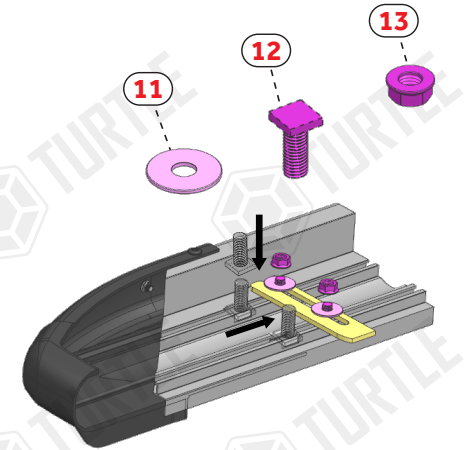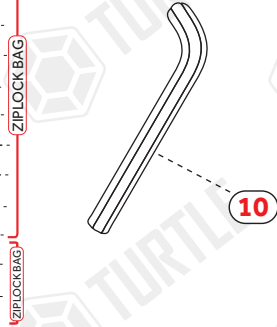

MB01020-MB02020-MB04020/ Rev.00/24.11.2023 (ÖMER)