



FIRST TIME INSTALLATION





- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01097(A-TYPE)
 MB02097(B-TYPE)
 MB04097(O-TYPE)

COMPATIBLE VEHICLES

CTRN C5 AIRCRSS SUV 18-
 OPL GRNLND X SUV 18-
 PEU 5008 (T87) SUV 17-
 VXHL GRNLND X SUV 18-
 PEU 3008 SUV 17-

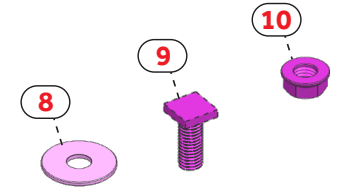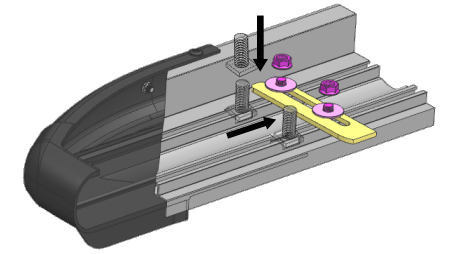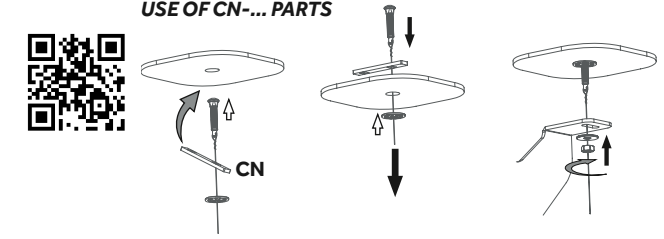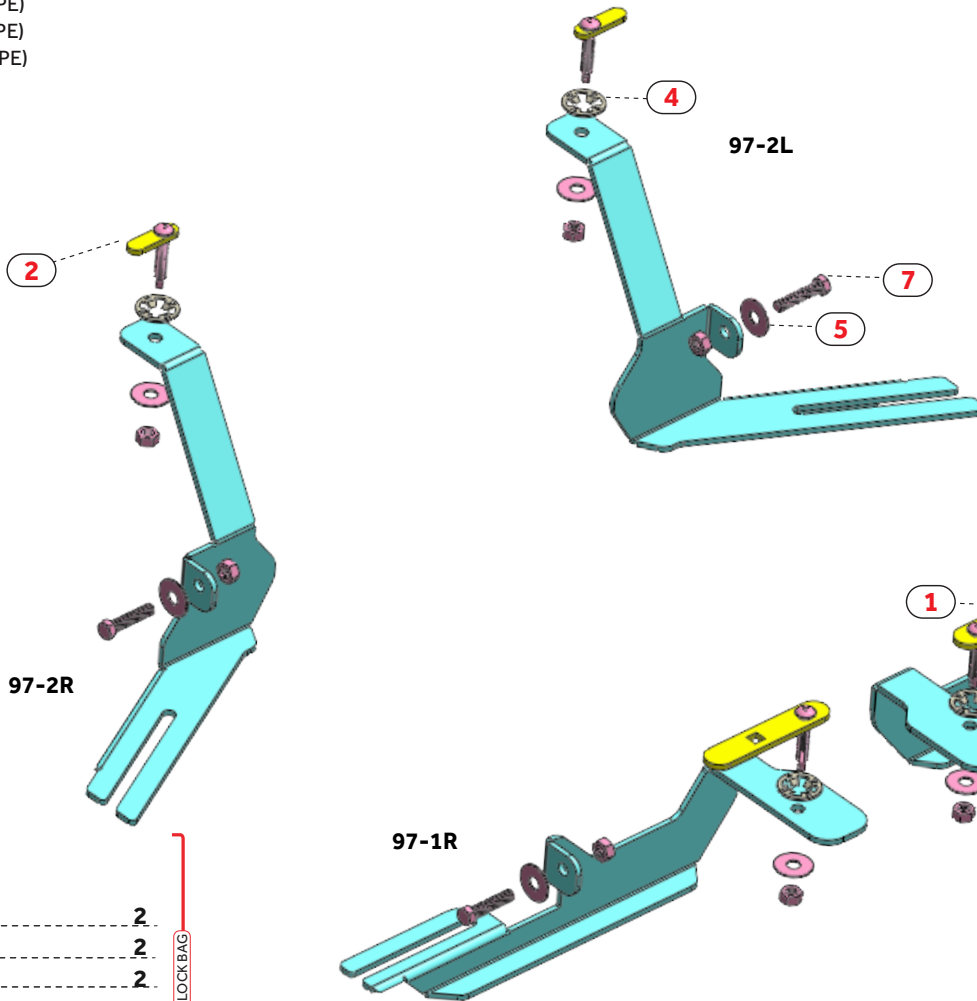

PACKAGE INCLUDED

1- CN-03 M8	2
2- CN-34 M8	2
3- M8 SPECIAL BOLT	2
4- CLAMPING PIECE	4
5- D8 WASHER	8
6- M8 HEX NUT	8
7- M8x25 HEX BOLT	4
8- D8 WASHER	8
9- M8x20 SQUARE BOLT	8
10- M8 FLANGE NUT	8

ZIPLOCK BAG

Whatever product type you will use, Example of side step types;
 Type A (Alyans, Sapphire, Emerald)
 Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)



MB01097/MB02097/MB04097 Rev.00/ 22.01.2024 (AYSENUJR)