



## ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01130(A- TYPE)

MB02130 (B-TYPE)

R-LINE: MB05135 (A/B TYPE)

MB02135 (B-TYPE)

## COMPATIBLE VEHICLES

PRSC CYNN (9PA-E1) SUV 02-10

PRSC CYNN (92A-E2) SUV 11-18

VWGN TORG (7L) SUV 02-10

VWGN TORG (7P) SUV 11-18



## FIRST TIME INSTALLATION

\* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

\* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

\* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION





## USE OF CN-... PARTS

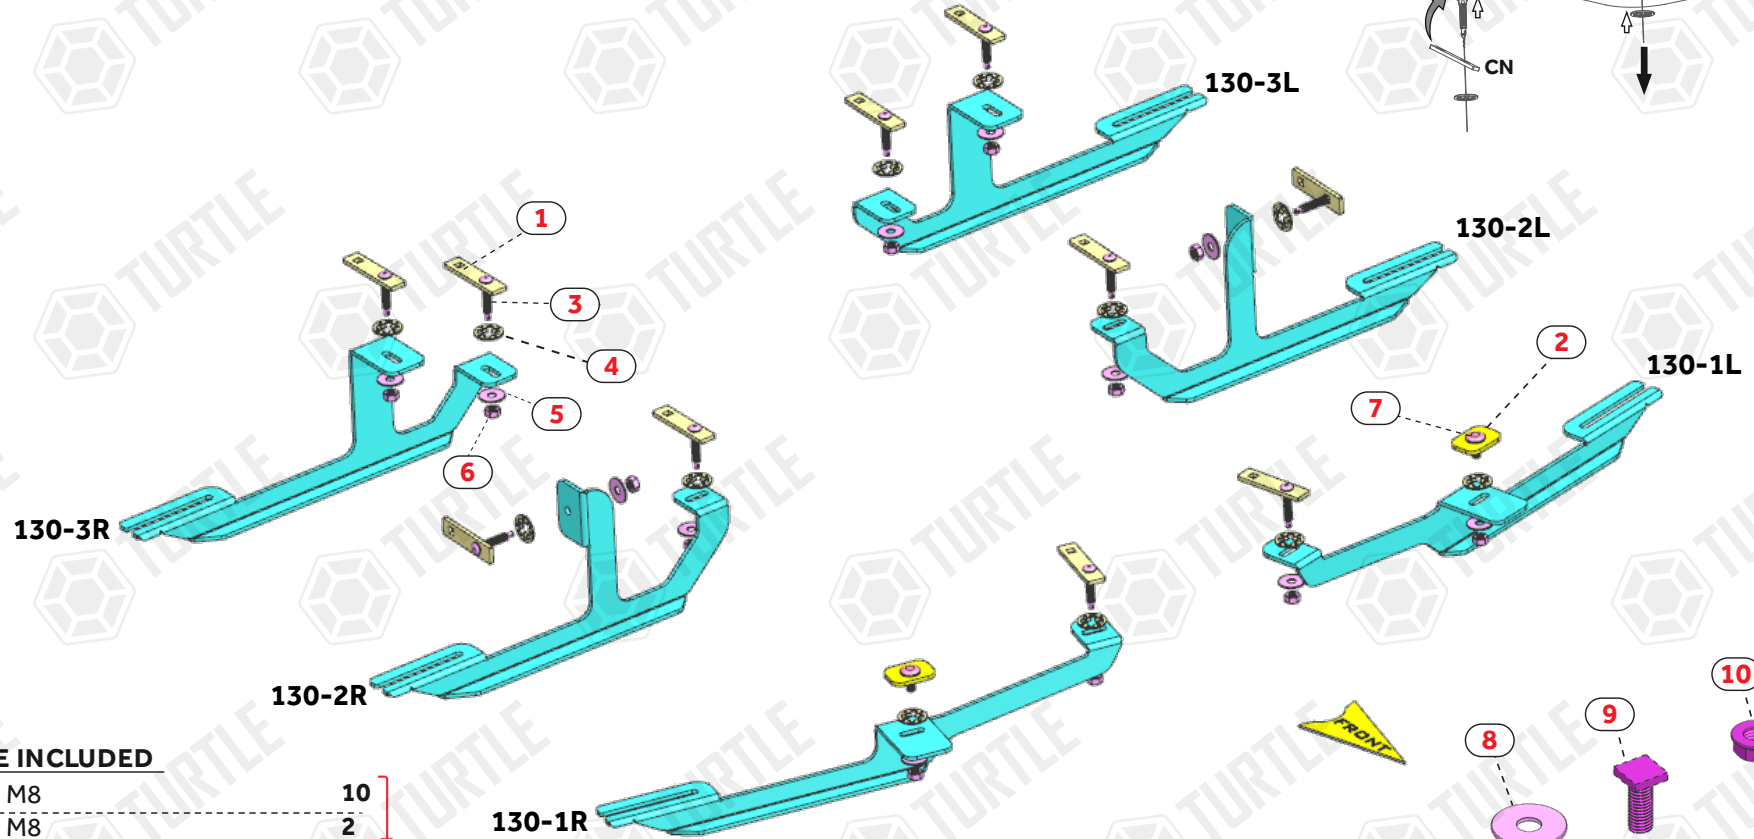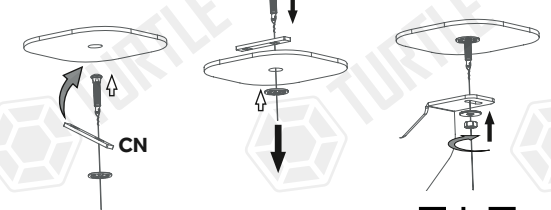

## PACKAGE INCLUDED

|                           |    |
|---------------------------|----|
| 1- CN-02 M8               | 20 |
| 2- CN-05 M8               | 2  |
| 3- M8 SPECIAL BOLT        | 10 |
| 4- CLAMPING PIECE         | 12 |
| 5- D8 WASHER              | 12 |
| 6- M8 HEX NUT             | 12 |
| 7- M8x30 LOCK HEADED BOLT | 2  |
| 8- D8 WASHER              | 12 |
| 9- M8x20 SQUARE BOLT      | 12 |
| 10- M8 FLANGE NUT         | 12 |

ZIPLOCK BAG

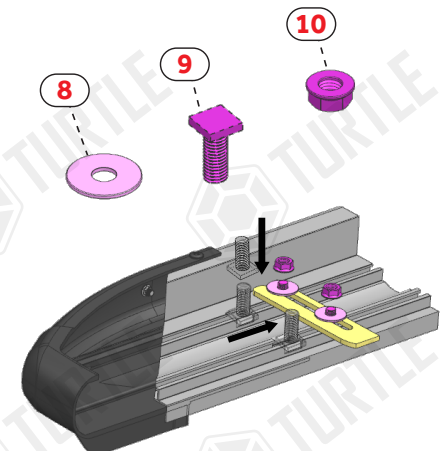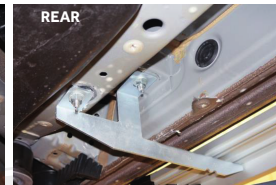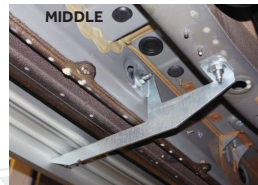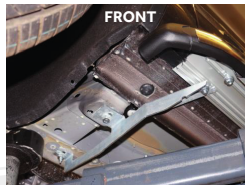

MB01130-MB02130-MB01135-MB02135/Rev.00/01.12.2023 (ÖMER)