



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION


ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01145 (A TYPE)
MB02145 (B TYPE)

COMPATIBLE VEHICLES

CTRN C3 AIRCRSS SUV 18+
PEU 2008 SUV 20-

* Car's Own Bolt

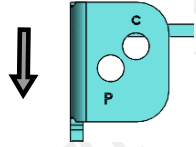


Görselde belirtilen noktalarda 2 farklı bağlantı noktası bulunmaktadır.
There are 2 different connection points at the points indicated in the image.


Eğer aracınız C3 ise "C" bağlantı noktasını kullanınız.
If your vehicle is C3, use the "C" connection point.

Eğer aracınız PEU ise "P" bağlantı noktasını kullanınız.
If your vehicle is PEU, use the "P" connection point.


USE OF CN-... PARTS

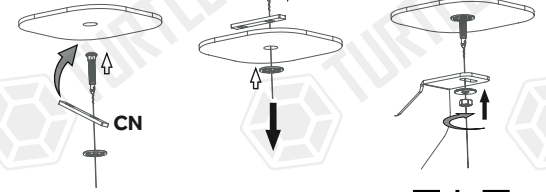


145-3

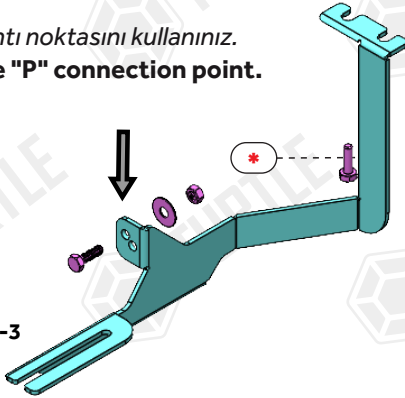

145-2

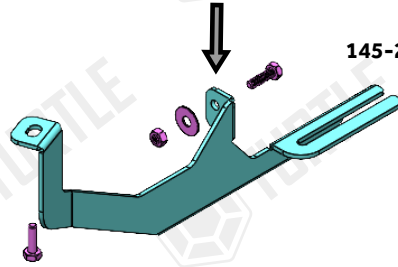

145-1L

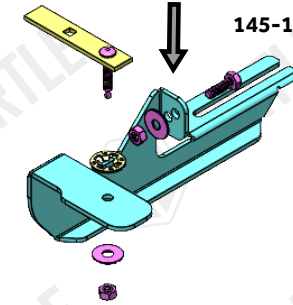

PACKAGE INCLUDED

1- CN-03 M8	2
2- M8x25 HEX BOLT	4
3- M8 SPECIAL BOLT	2
4- CLAMPING PIECE	2
5- D8 WASHER	6
6- M8 HEX NUT	6
7- D8 WASHER	8
8- M8x20 SQUARE BOLT	8
9- M8 FLANGE NUT	8

145-1R

