



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01158 (A TYPE)






MB02158 (B TYPE)

COMPATIBLE VEHICLES

HND HRV (Mk3) SUV 21-

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

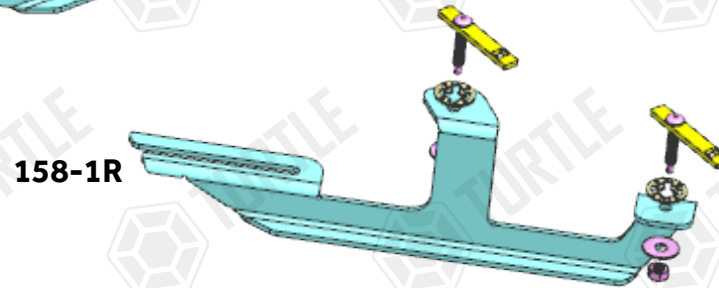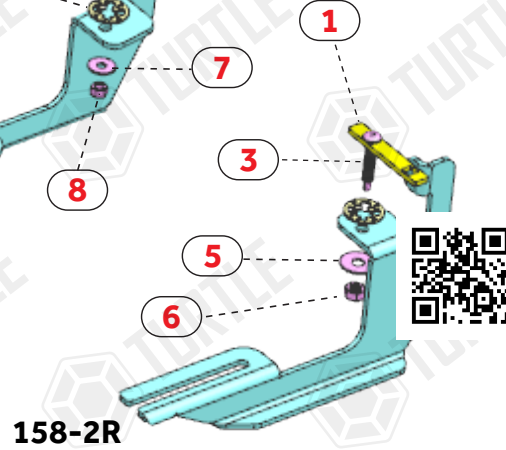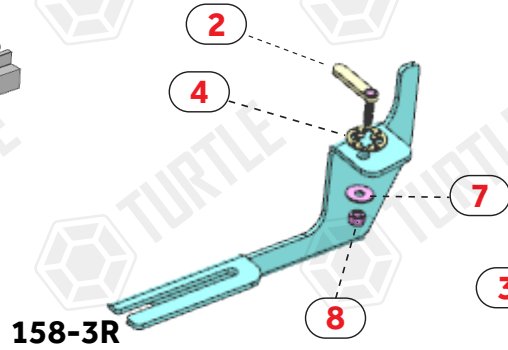
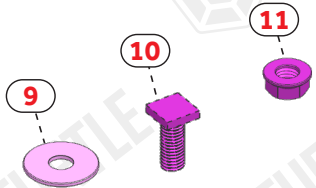
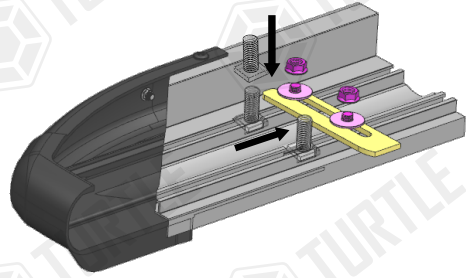


158-3L

158-2L

158-1L

USE OF CN-... PARTS

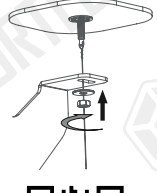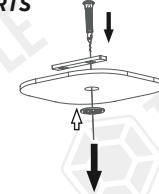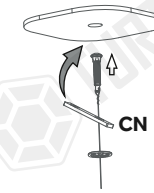

PACKAGE INCLUDED

1- CN-01 M8	6
2- CN-08 M6	2
3- M8 SPECIAL BOLT	6
4- CLAMPING PIECE	8
5- M8 WASHER	6
6- M8 HEX NUT	6
7- M6 WASHER	2
8- M6 HEX FLANGE NUT	2
9- D8 WASHER	12
10- M8x20 SQUARE BOLT	12
11- M8 FLANGE NUT	12

ZIPLOCK BAG