



FIRST TIME INSTALLATION


- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01170 (A TYPE)


MB02170 (B TYPE)

USE OF CN-... PARTS

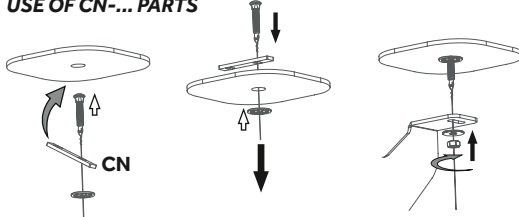

COMPATIBLE VEHICLES

NSS QSHQ (J12) 21 - 5dr SUV

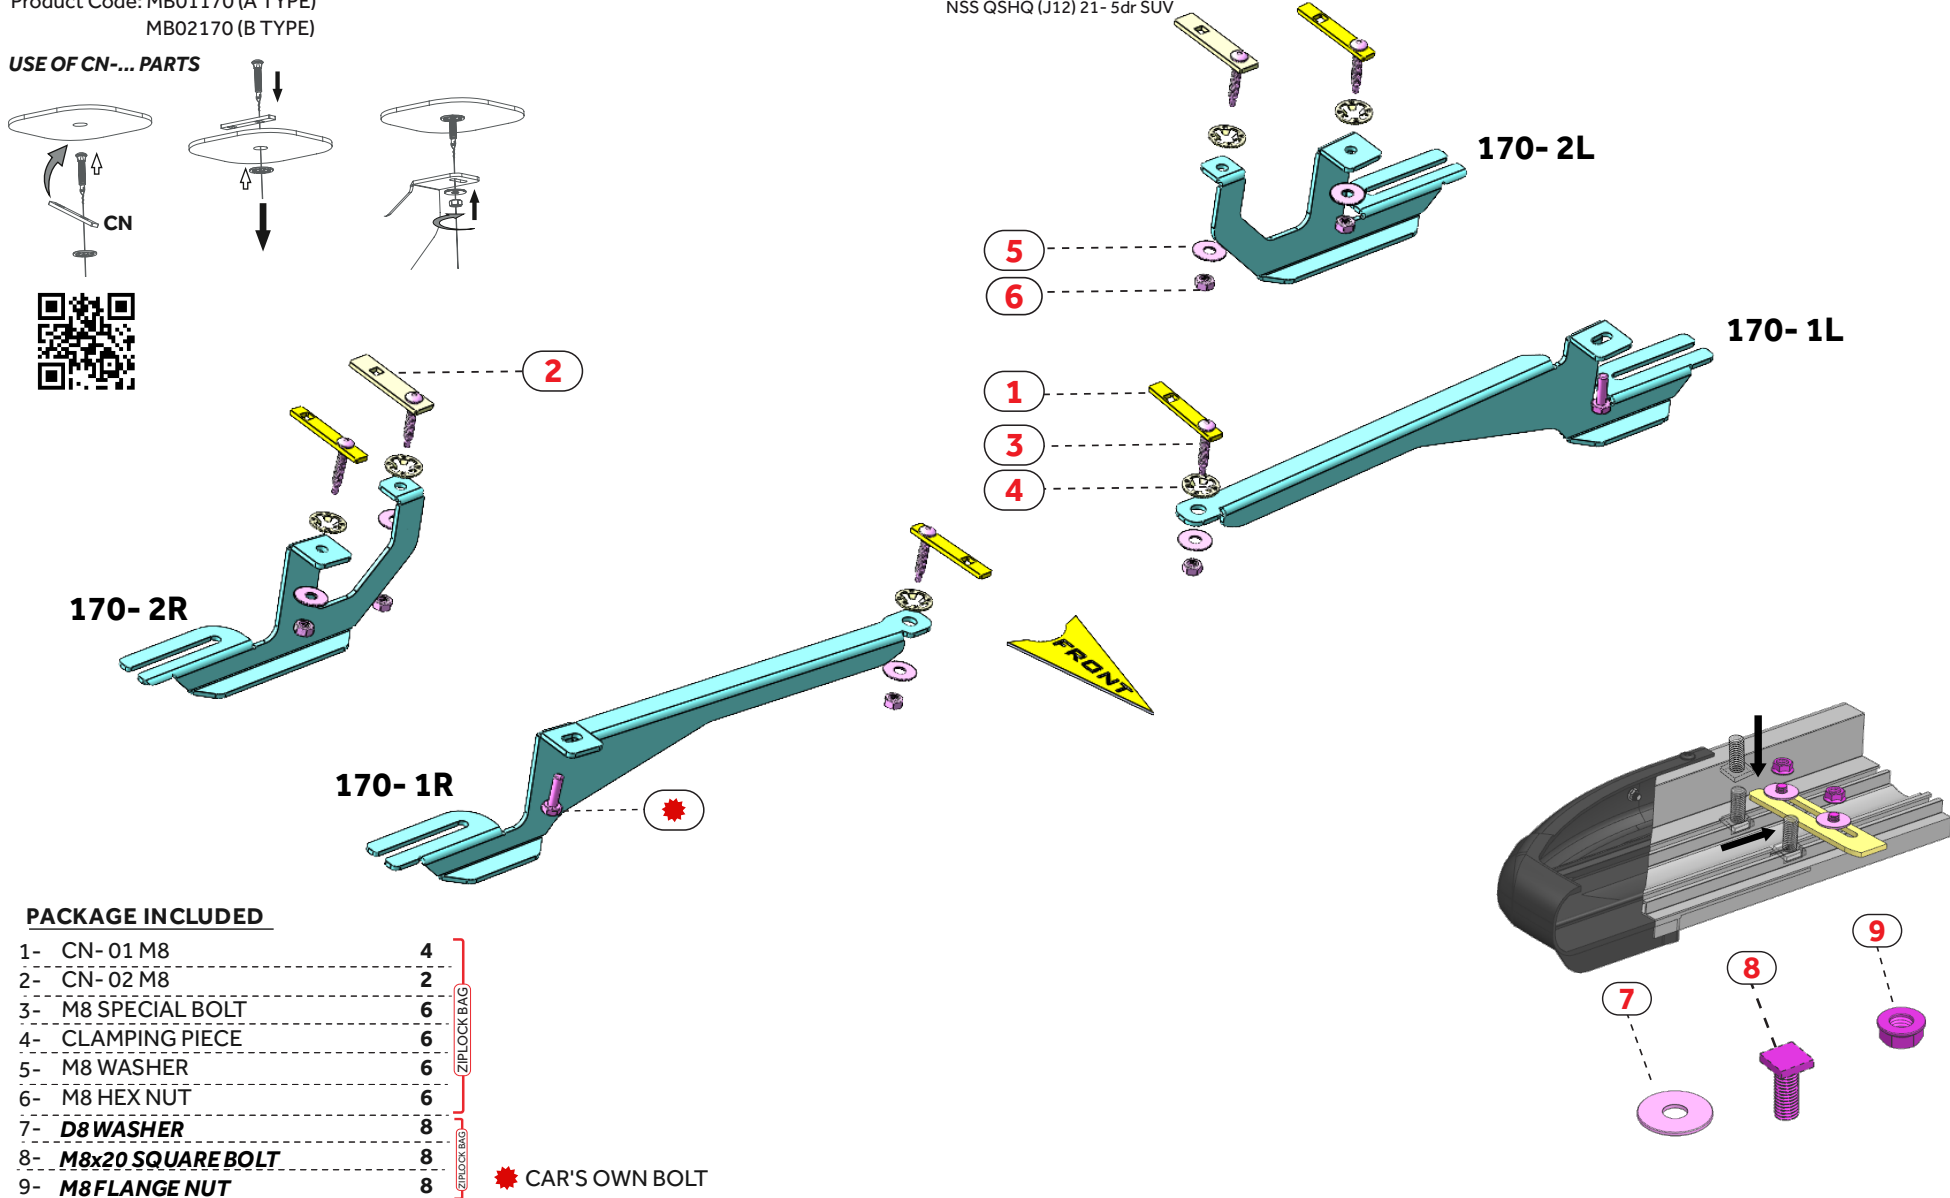

PACKAGE INCLUDED

1- CN- 01 M8	4	ZIPLOCK BAG
2- CN- 02 M8	2	
3- M8 SPECIAL BOLT	6	
4- CLAMPING PIECE	6	
5- M8 WASHER	6	ZIPLOCK BAG
6- M8 HEX NUT	6	
7- D8 WASHER	8	
8- M8x20 SQUARE BOLT	8	
9- M8 FLANGE NUT	8	
* CAR'S OWN BOLT		