



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01175 (A TYPE)



MB02175 (B TYPE)

COMPATIBLE VEHICLES

BMW X1 F48 SUV 16-22

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

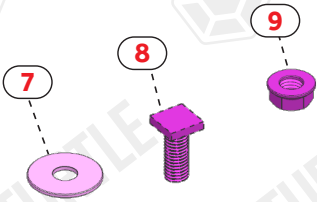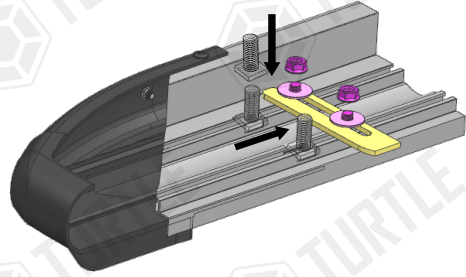

PACKAGE INCLUDED

1- M8 SPECIAL BOLT	4	ZIPLOCK BAG
2- CLAMPING PIECE	4	
3- M8 WASHER	4	
4- M8 HEX NUT	4	
5- M6x25 INBUS BOLT	8	ZIPLOCK BAG
6- ALYAN WRENCH 5mm	1	
7- D8 WASHER	8	
8- M8x20 SQUARE BOLT	8	
9- M8 FLANGE NUT	8	

