



## ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01082(A-TYPE)

MB02082(B-TYPE)




## COMPATIBLE VEHICLES

TYT RV4 (XA50) SUV 19-

## FIRST TIME INSTALLATION


- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

## USE OF CN-... PARTS

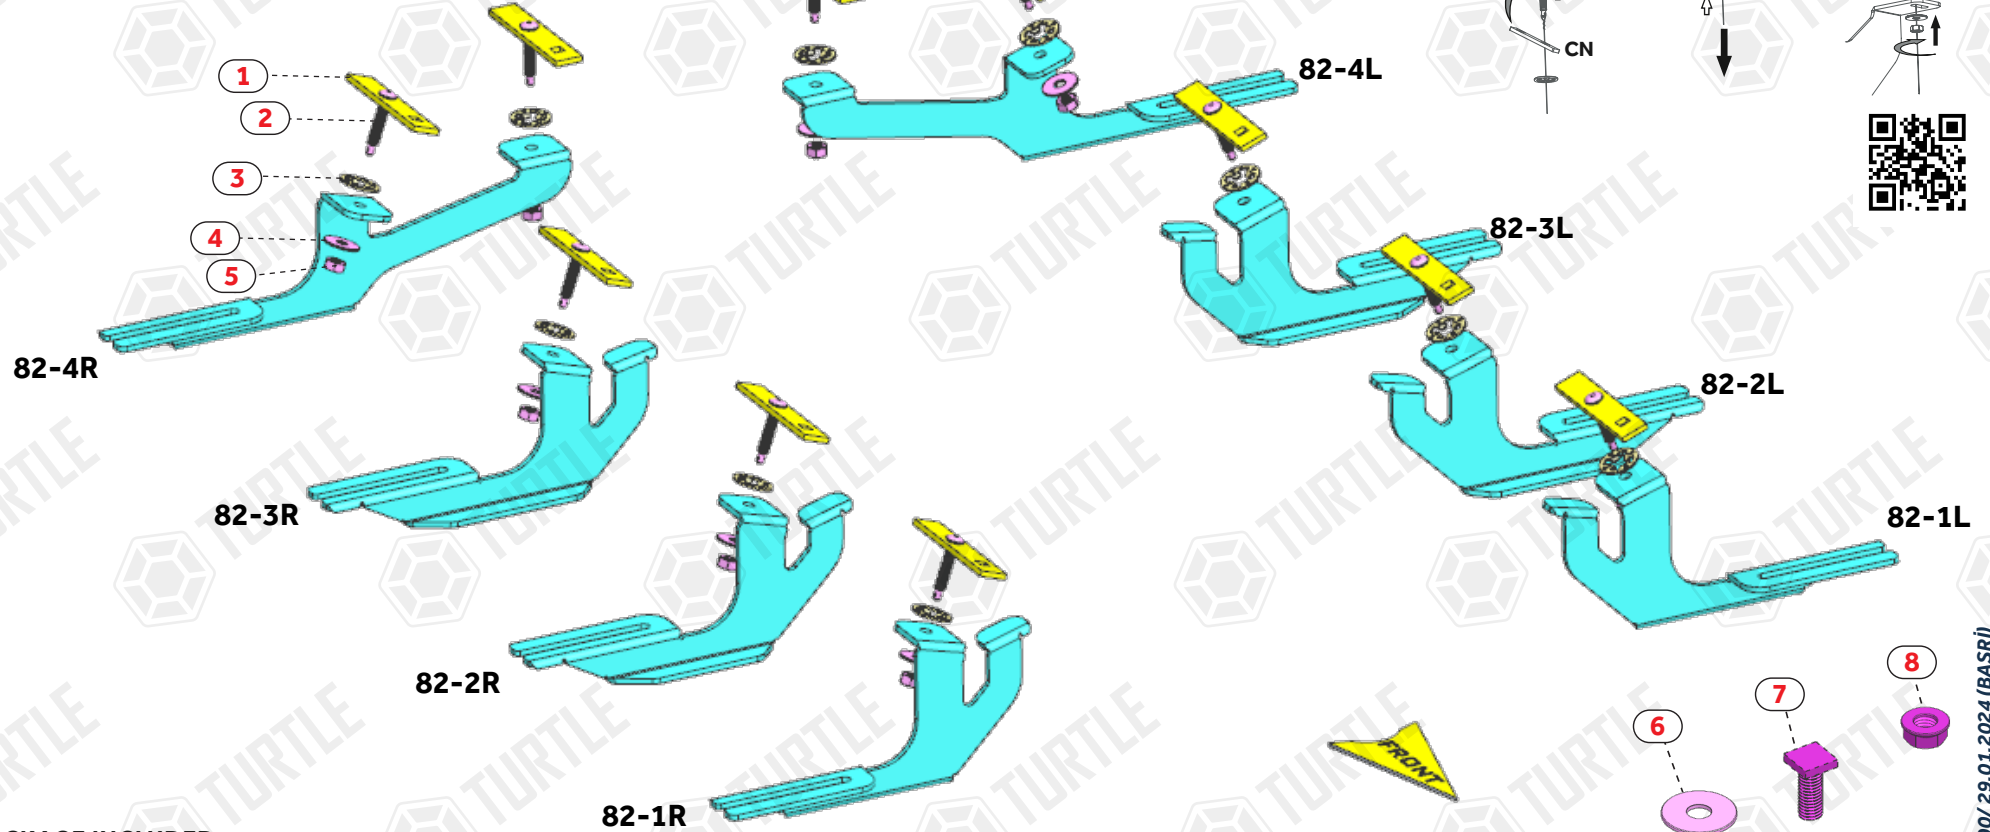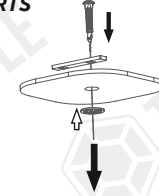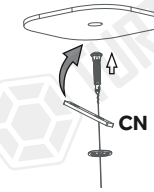

## PACKAGE INCLUDED

|                      |    |              |
|----------------------|----|--------------|
| 1- CN-03 M8          | 10 | ZIP LOCK BAG |
| 2- M8 SPECIAL BOLT   | 10 |              |
| 3- CLAMPING PIECE    | 10 |              |
| 4- M8 WASHER         | 10 |              |
| 5- M8 HEX NUT        | 10 |              |
| 6- D8 WASHER         | 16 | ZIP LOCK BAG |
| 7- M8x20 SQUARE BOLT | 16 |              |
| 8- M8 FLANGE NUT     | 16 |              |

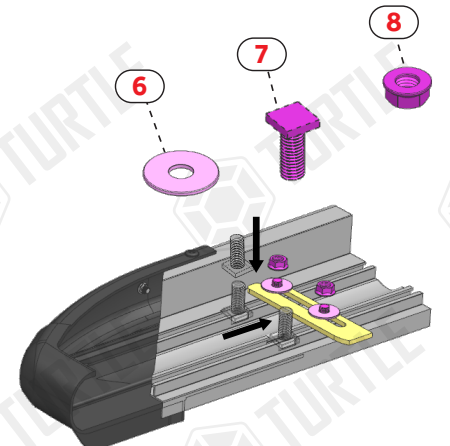

MB01082-MB02082/ Rev.00/ 29.01.2024 (BASRI)