



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)


Product Code: MB01129 (A-TYPE)

MB02129 (B-TYPE)

COMPATIBLE VEHICLES

SKD KDQ SUV 17-
 VWGN T-RC SUV 17-
 VWGN TGN SUV 07-16
 VWGN TGN (5N) SUV 16-
 VWGN TGN ALLSPC (5N) SUV 18-
 SEA ATC SUV 16-
 AUD Q2 SUV 17-

USE OF CN-... PARTS

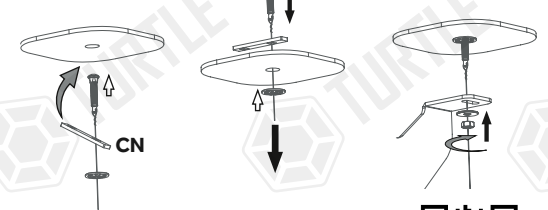


A

Eğer aracınız T-Roc ise görselde belirtilen yerlerde 7 ve 8 numaralı bağlantı parçalarını kullanınız.
 If your vehicle is a T-Roc, use the connection parts 7 and 8 at the places indicated in the image.

B

Eğer aracınız Q2 ise görselde belirtilen yerlerde 9, 3, 4 ve 5 numaralı bağlantı parçalarını kullanınız.
 If your vehicle is a Q2, use the connection parts 9, 3, 4 and 5 at the places indicated in the image.

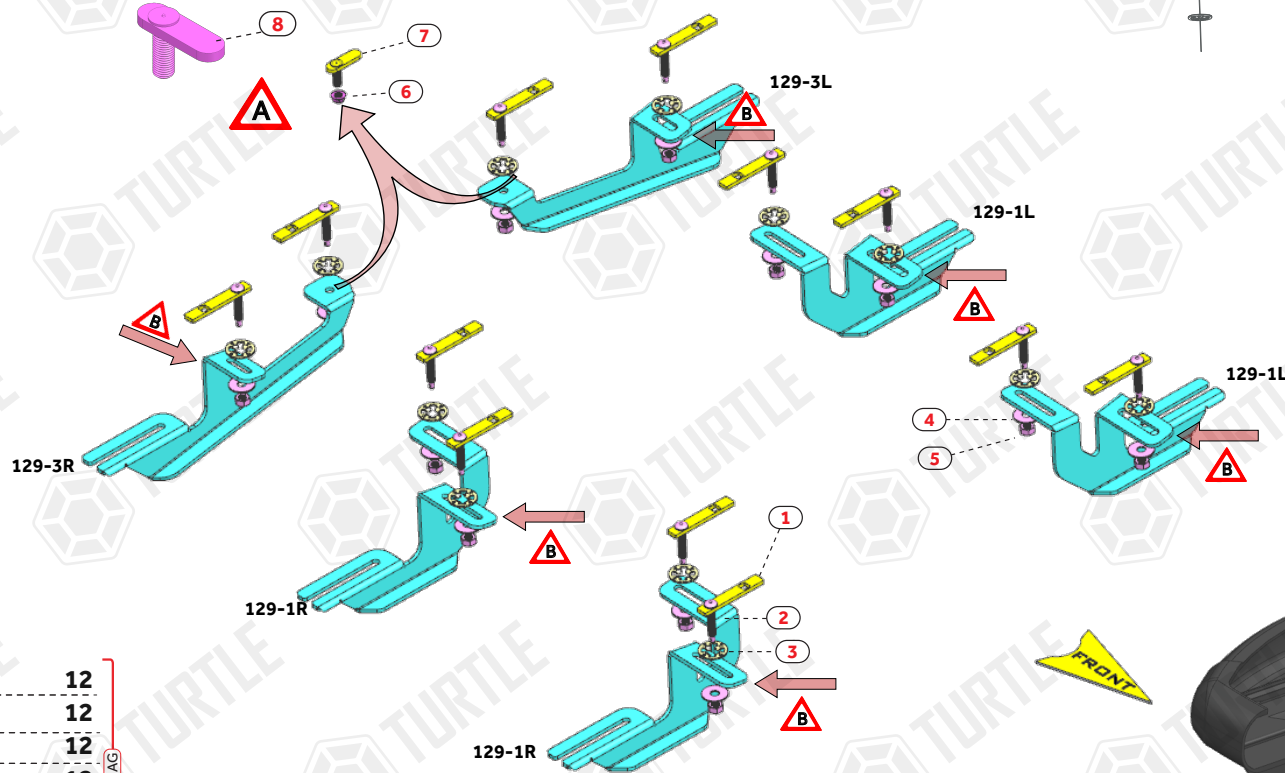


PACKAGE INCLUDED

1- CN-02 M8	12
2- M8 SPECIAL BOLT	12
3- CLAMPING PIECE	12
4- D8 WASHER	12
5- M8 HEX NUT	12
6- M6 HEX FLANGE NUT	2
7- CN-04 M6	2
8- CN-34 M8	6
9- D8 WASHER	12
10- M8x20 SQUARE BOLT	12
11- M8 FLANGE NUT	12

ZIP LOCK BAG

ZIP LOCK BAG

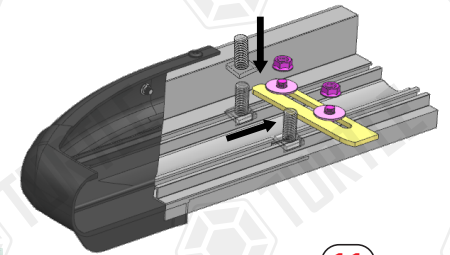

MB01129-MB02129/Rev.00/27.11.2023 (ÖMER)