



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB02138 (B TYPE)
MB03138 (E TYPE)
MB04138 (E TYPE)

COMPATIBLE VEHICLES

CTRN BRLNG VAN 19-
OPL CMB E VAN 19-
OPL CMB LIFE MPV 19-
PEU PRTNR VAN 19-
PEU RFTR MPV 19-
TYT PACE CITY VAN 19-
TYT PACE CITY VERS MPV 19-
VXHL CMB E VAN 19-
VXHL CMB LIFE MPV 19-

138-3R

138-2R


138-1R

138-3L

138-2L


138-1L

USE OF CN-... PARTS

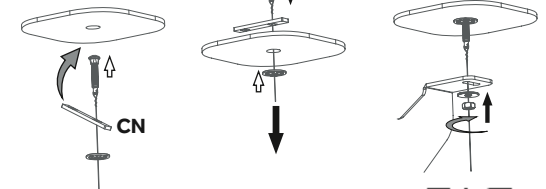

PACKAGE INCLUDED

1- CN-02 M8	2	ZIPLOCK BAG
2- CN-03 M8	2	
3- CN-08 M6	2	
4- CN-34 M8	2	
5- M8 SPECIAL BOLT	4	
6- CLAMPING PIECE	8	
7- M8x25 HEX BOLT	4	
8- D8 WASHER	14	
9- M8 HEX NUT	10	
10- D6 WASHER	2	
11- M6 HEX NUT	2	ZIPLOCK BAG
12- D8 WASHER	12	
13- M8x20 SQUARE BOLT	12	
14- M8 FLANGE NUT	12	

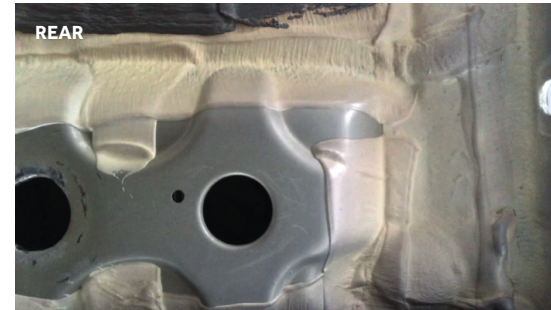

MB02138 / MB03138 / MB04138 / Rev.00 / 20.02.2024 (AYSENUUR)