



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB02191 (B TYPE)

MB03191(E TYPE)

COMPATIBLE VEHICLES



FRD COUR 24-

FIRST TIME INSTALLATION

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED



* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

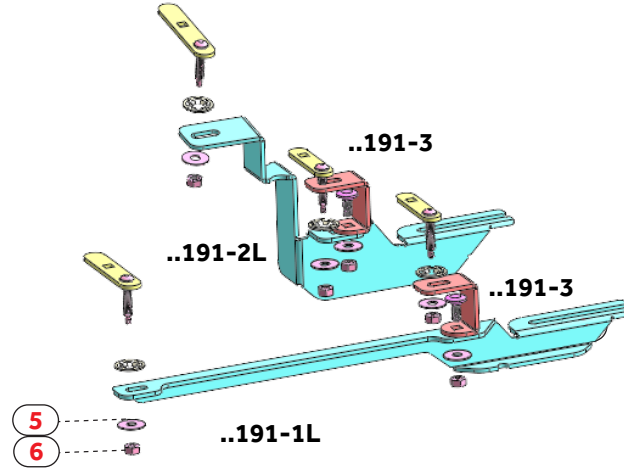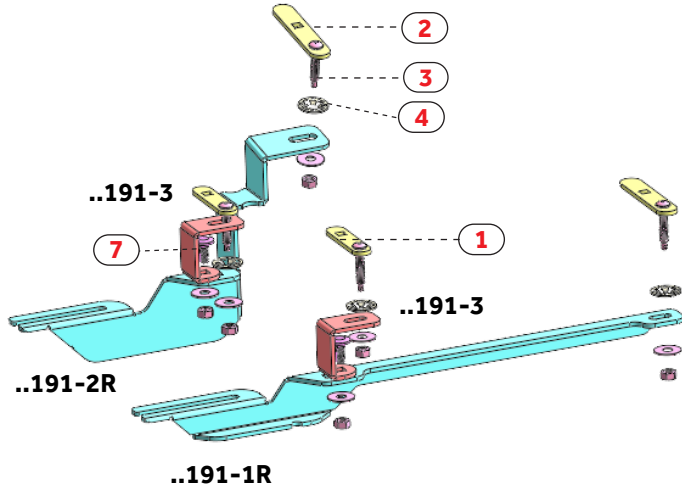

PACKAGE INCLUDED

1-	CN-02 M8	4
2-	CN-03 M8	4
3-	M8 SPECIAL BOLT	8
4-	CLAMPING PIECE	8
5-	D8 WASHER	12
6-	M8 HEX NUT	12
7-	M8x20 HEX BOLT	4
8-	D8 WASHER	8
9-	M8x20 SQUARE BOLT	8
10-	M8 FLANGE NUT	8

USE OF CN-... PARTS

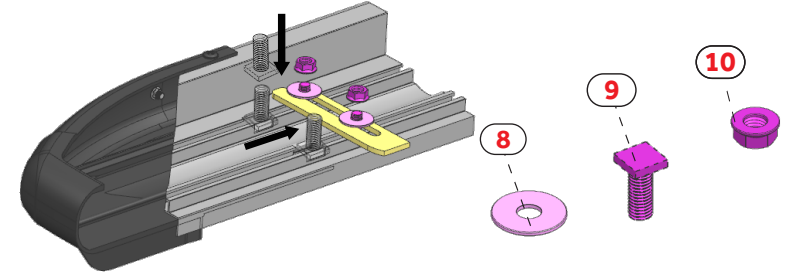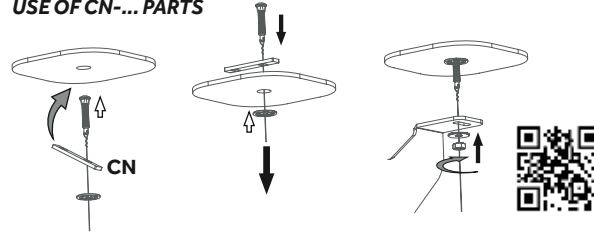

MB02191 - MB03191 / Rev.00 / 26.04.2024 (ECE)