



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05020(A/B-TYPE)




FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

COMPATIBLE VEHICLES

DAC DSTR SUV 18-
REN DSTR SUV 18-

USE OF CN-... PARTS

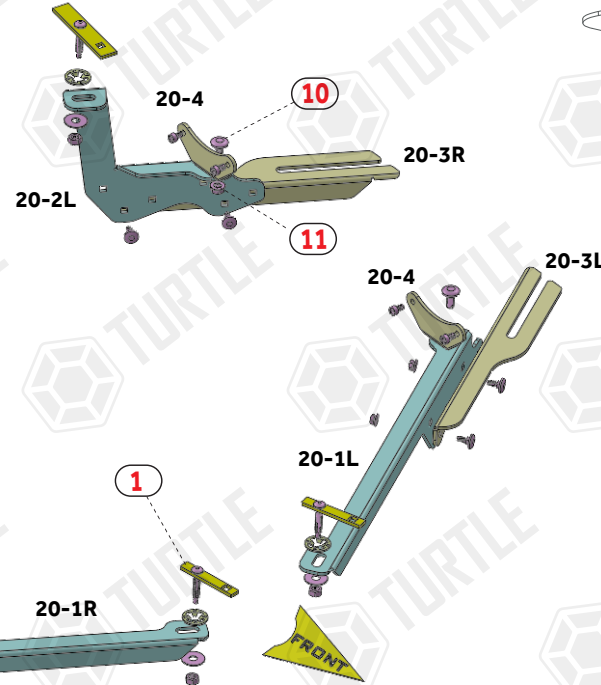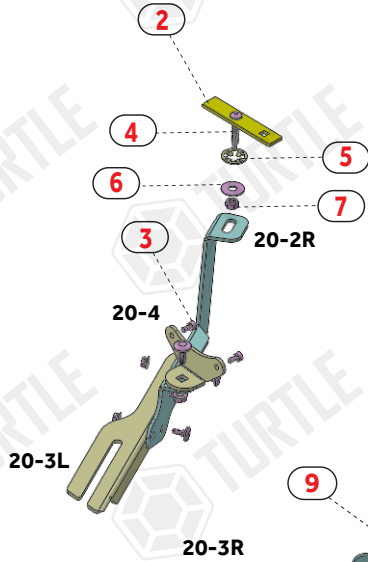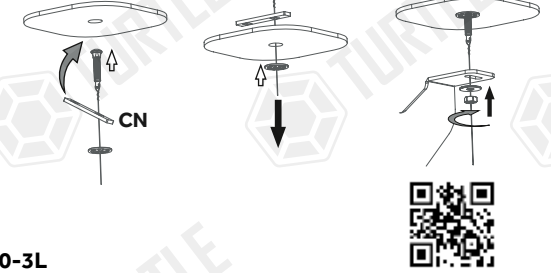

PACKAGE INCLUDED

1- CN-01 M8	2
2- CN-03 M8	2
3- M6x10 INBUS BOLT	8
4- M8 SPECIAL BOLT	4
5- CLAMPING PIECE	4
6- D8 WASHER	4
7- M8 HEX NUT	4
8- M6x15 LOCK HEADED BOLT	8
9- M6 HEX FLANGE NUT	8
10- M8x20 LOCK HEADED BOLT	4
11- M8 HEX FLANGE NUT	4
12- 5 mm ALLEN WRENCH	1
13- D8 WASHER	8
14- M8x20 SQUARE BOLT	8
15- M8 FLANGE NUT	8

ZIP LOCK BAG


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

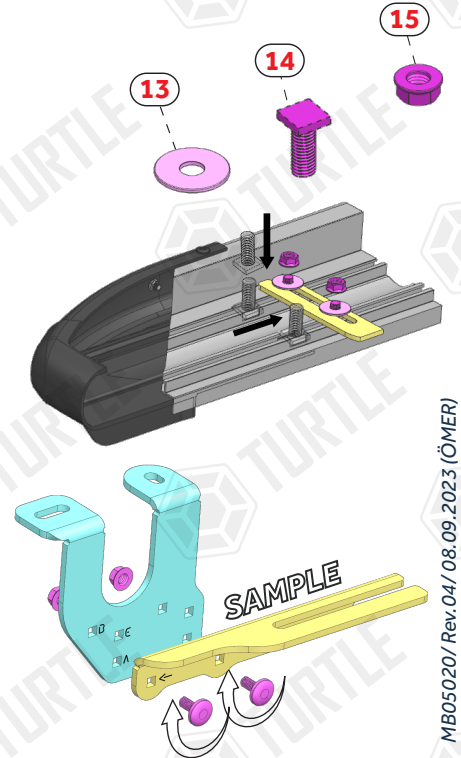

MB05020/ Rev.04/ 08.09.2023 (ÖMER)