



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05040 (A/B-TYPE)



COMPATIBLE VEHICLES

FRD RNGR (T6) DOUBLE CAB 11-15
FRD RNGR (T7) DOUBLE CAB 16-
MZD BT5 (UP/UR) DOUBLE CAB 11-

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

USE OF CN-... PARTS

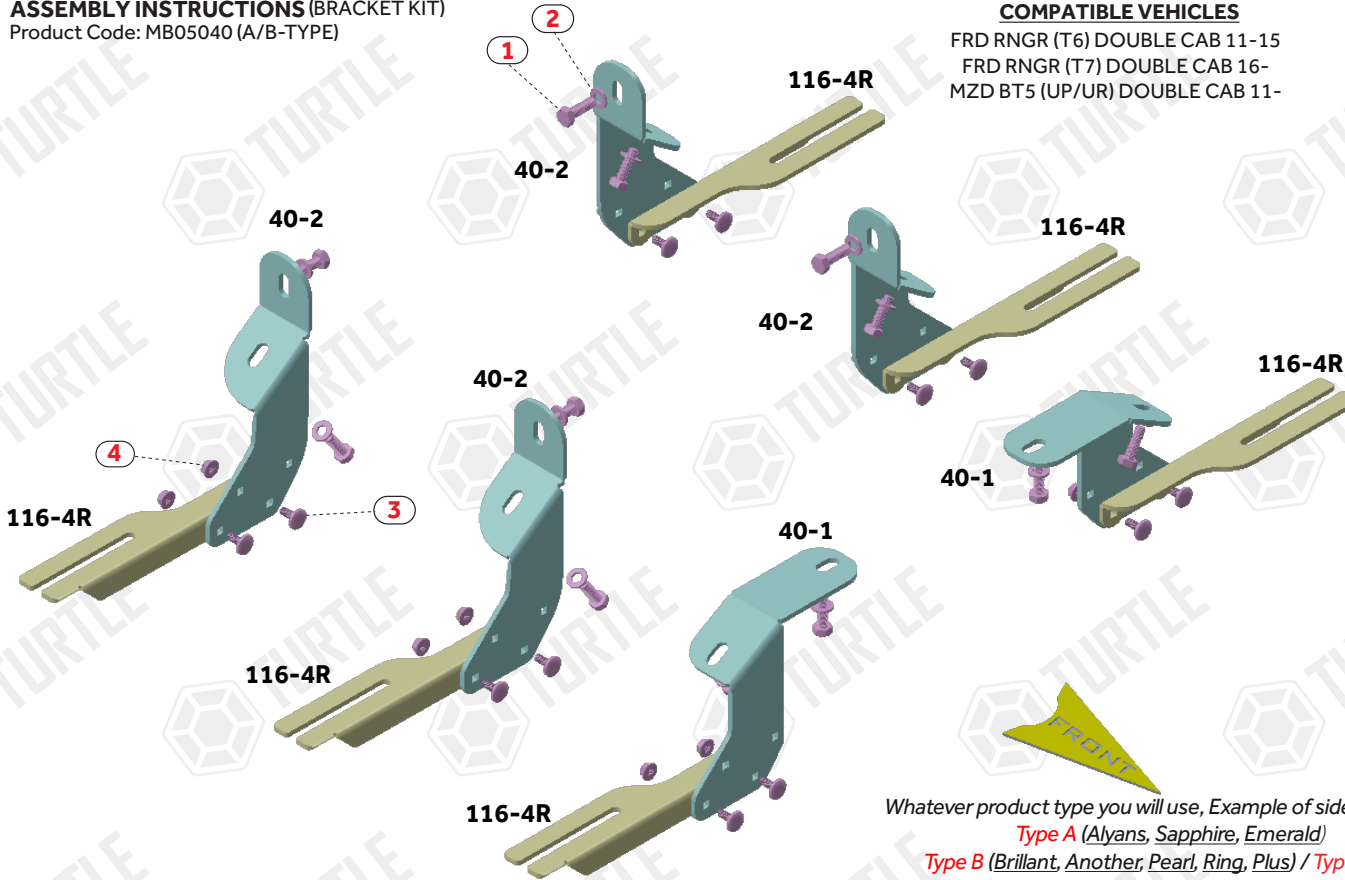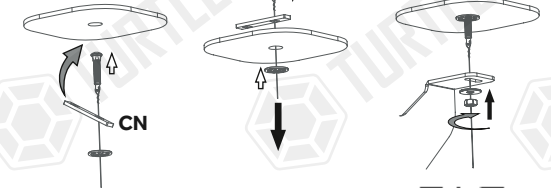

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / **Type E** (Era)


Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

PACKAGE INCLUDED

1- M10x30 HEX BOLT	12
2- D10 WASHER	12
3- M6x15 LOCK HEADED BOLT	12
4- M6 HEX FLANGE NUT	12
5- D8 WASHER	12
6- M8x20 SQUARE BOLT	12
7- M8 FLANGE NUT	12

ZIPLOCK BAG

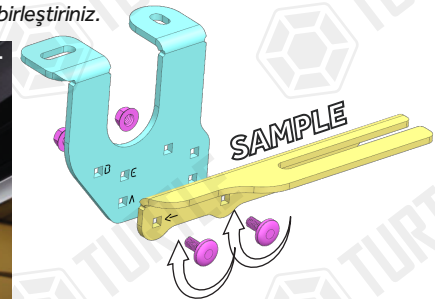

MB05040 / Rev.03 / 11.12.2023 (ECE)