



FIRST TIME INSTALLATION


- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05095(A/B-TYPE)

COMPATIBLE VEHICLES

- FI TLNT (X82) 16-
- OPL VVR (X83) 01-14
- OPL VVR (X82) 14-18
- REN TRFC (X83) 01-14
- REN TRFC (X82) 14-
- VXHL VVR (X83) 01-14
- VXHL VVR (X82) 14-18
- MIT XPRSS (X82) 20-
- NSS PMSTR (X83) 02-14
- NSS NV300 (X82) 16-

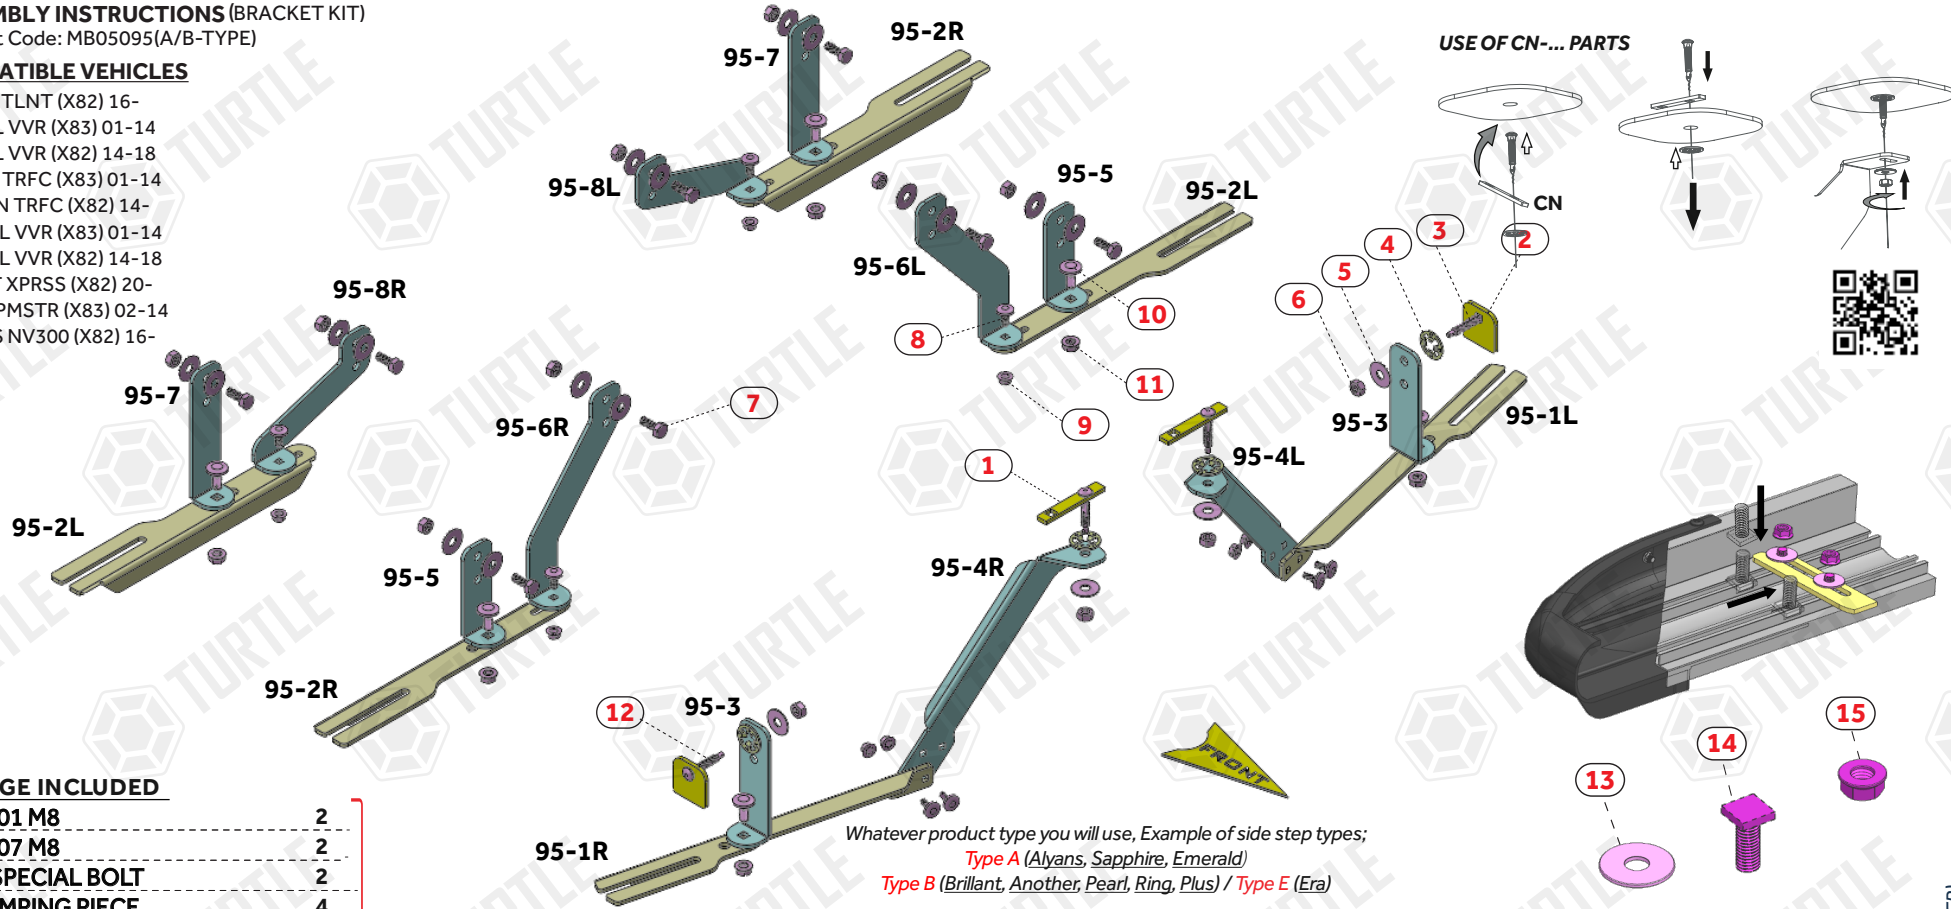

PACKAGE INCLUDED

1- CN-01 M8	2
2- CN-07 M8	2
3- M8 SPECIAL BOLT	2
4- CLAMPING PIECE	4
5- D8 WASHER	20
6- M8 HEX NUT	12
7- M8x25 HEX BOLT	8
8- M6x15 LOCK HEADED BOLT	8
9- M6 HEX FLANGE NUT	8
10- M8x20 LOCK HEADED BOLT	6
11- M8 HEX FLANGE NUT	6
12- M8x30 LOCK HEADED BOLT	2
13- D8 WASHER	12
14- M8x20 SQUARE BOLT	12
15- M8 FLANGE NUT	12

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

