



### FIRST TIME INSTALLATION

- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

### ASSEMBLY INSTRUCTIONS (BRACKET KIT)




Product Code: MB05153 (A/B-TYPE)

### COMPATIBLE VEHICLES

ISZ DMX (RA/RC) 02-12



### USE OF CN-... PARTS

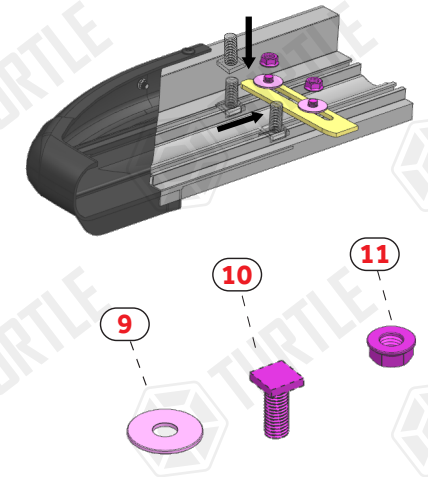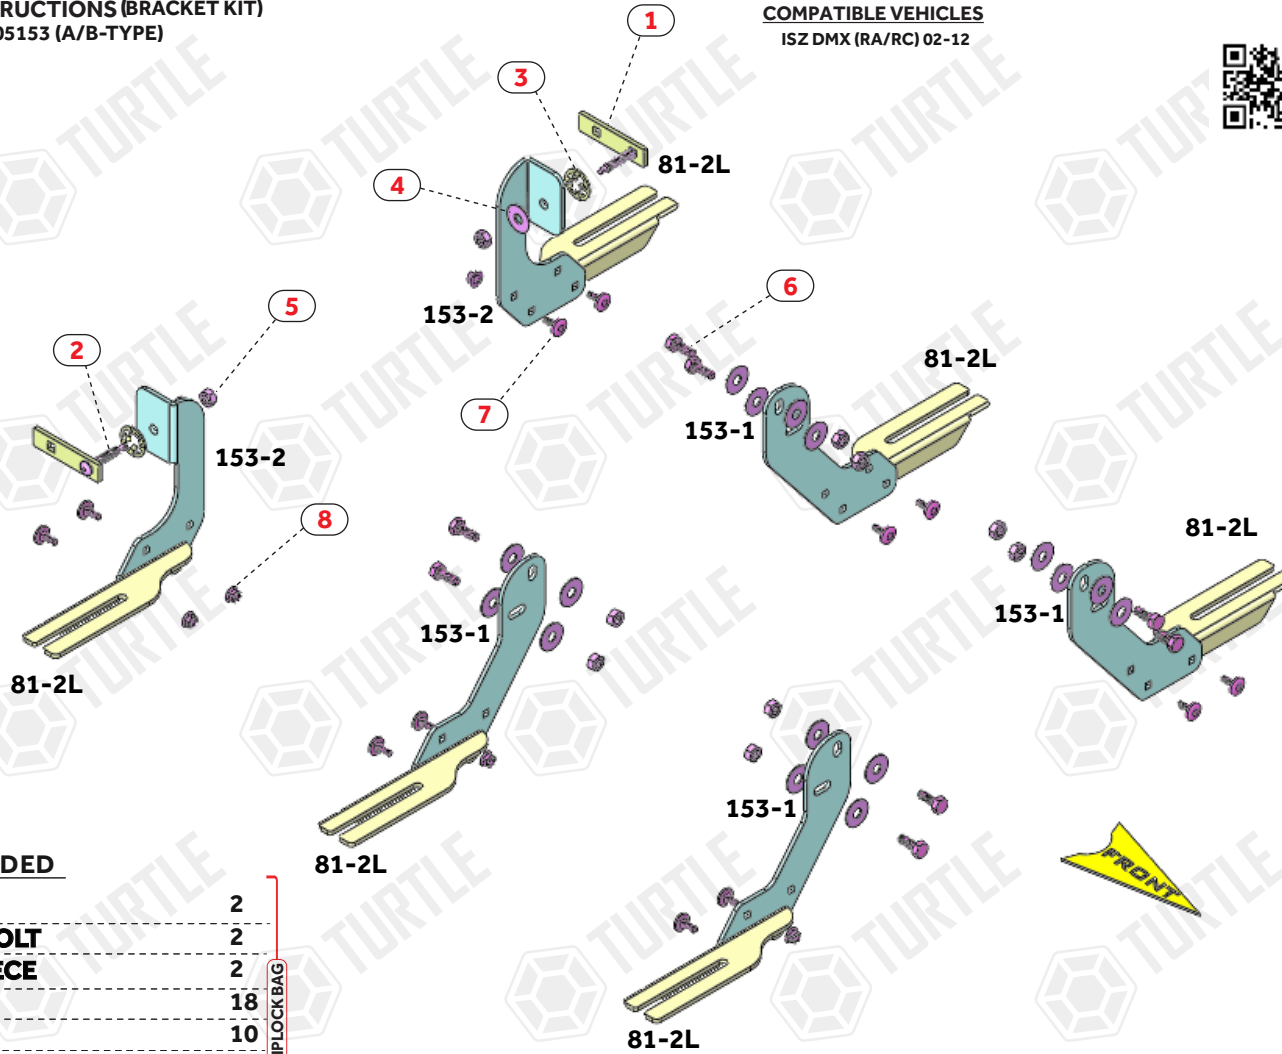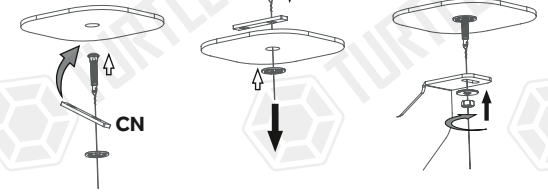

### PACKAGE INCLUDED

1- CN-02 M8	2
2- M8 SPECIAL BOLT	2
3- CLAMPING PIECE	2
4- D8 WASHER	18
5- M8 HEX NUT	10
6- M8x20 HEX BOLT	8
7- M6x15 LOCK HEADED BOLT	12
8- M6 HEX FLANGE NUT	12
9- D8 WASHER	12
10- M8x20 SQUARE BOLT	12
11- M8 FLANGE NUT	12

ZIPLOCK BAG

Whatever product type you will use, Example of side step types;

**Type A** (Alyans, Sapphire, Emerald)

**Type B** (Brillant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

