
TURTLE


FIRST TIME INSTALLATION
* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION


ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05155 (A/B-TYPE)


COMPATIBLE VEHICLES
HYN TCSN (NX4) 22-

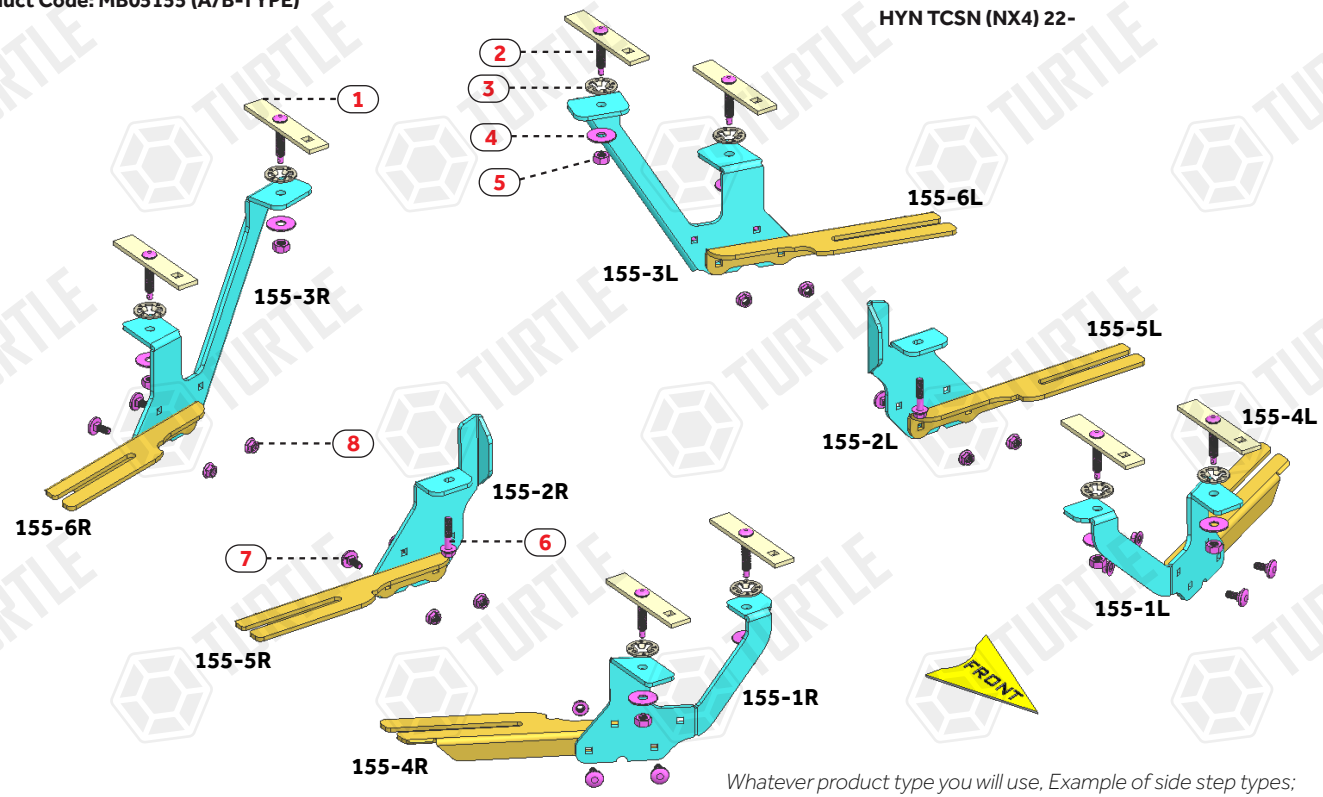

USE OF CN-... PARTS

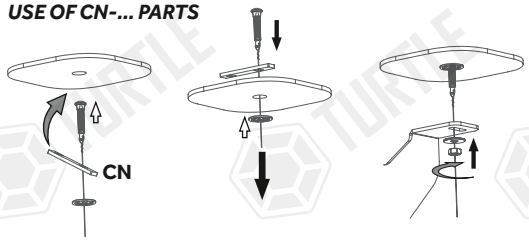

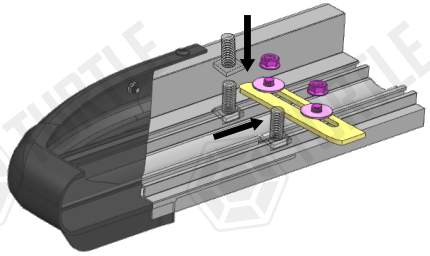

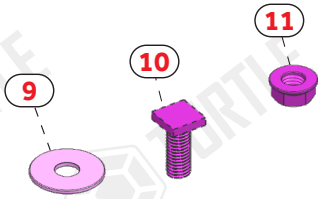

PACKAGE INCLUDED

1-	CN-03 M8	8	ZIPLOCK BAG
2-	M8 SPECIAL BOLT	8	
3-	CLAMPING PIECE	8	
4-	D8 WASHER	8	
5-	M8 HEX NUT	8	
6-	M6x30 FLANGE HEX BOLT	2	
7-	M6x15 LOCK HEADED BOLT	12	
8-	M6 HEX FLANGE NUT	12	
9-	***D8 WASHER***	12	ZIPLOCK BAG
10-	***M8x20 SQUARE BOLT***	12	
11-	***M8 FLANGE NUT***	12	

Whatever product type you will use, Example of side step types;
Type A (Alyans, Sapphire, Emerald)
Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)


Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.







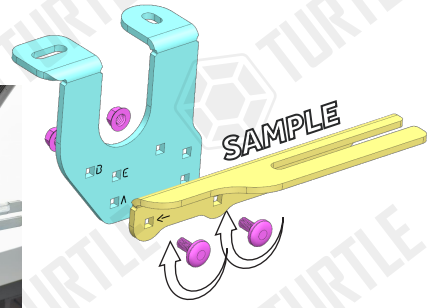

MB05155/ Rev.02/ 30.11.2023 (BASRİ)

CAN OTOMOTİV İNŞ. İTH. İHR. SAN. VE TİC. LTD. ŞTİ.
Veliköy OSB 4. Cadde No:20/A Çerkezköy/TEKIRDAĞ
www.canotomotiv.com.tr / turtlecancarry.com / turtlecancarry.eu / turtlecancarry.com.tr
+90 282 746 1320 info@canotomotiv.com.tr