



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05163 (A/B-TYPE)



COMPATIBLE VEHICLES

VWGN TGO SUV 21-
VWGN NVS SUV 21-
VWGN T-CRSS SUV 19-
SKD QMQ PREMIUM SUV 19-

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

USE OF CN-... PARTS

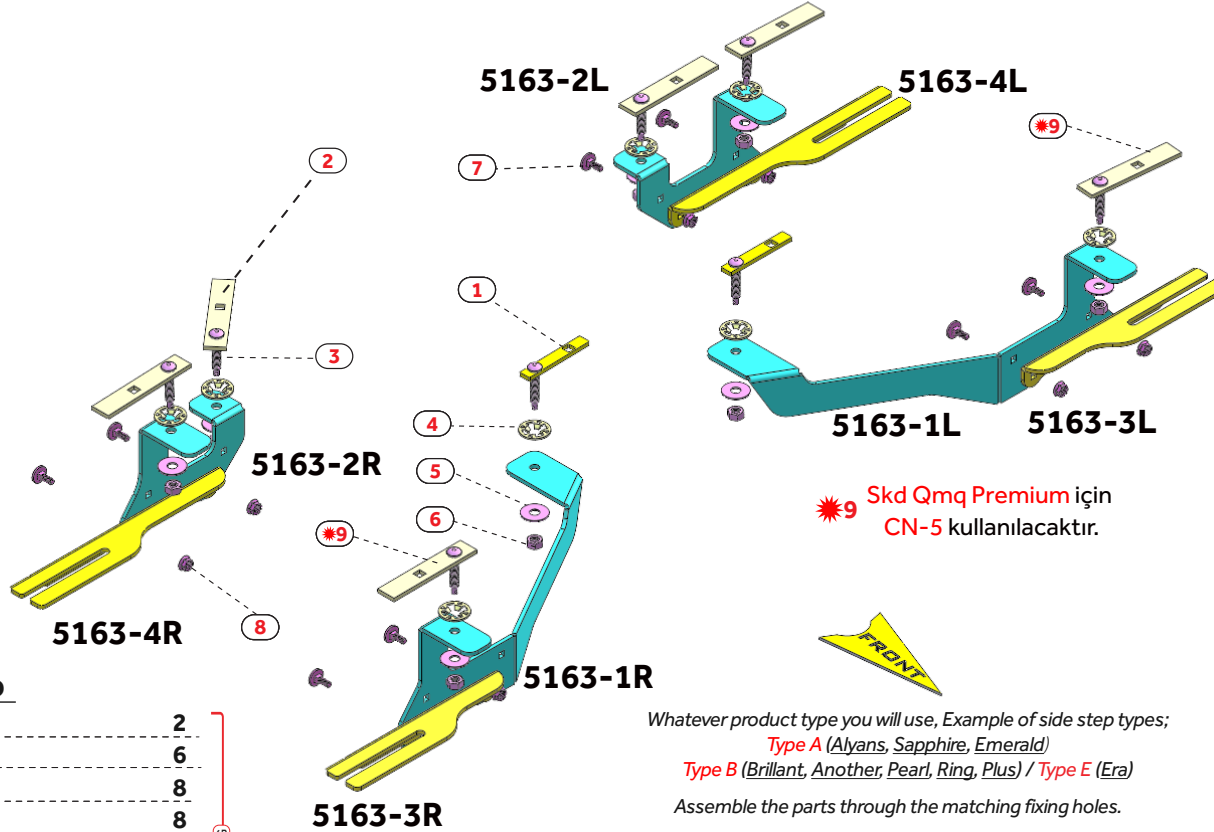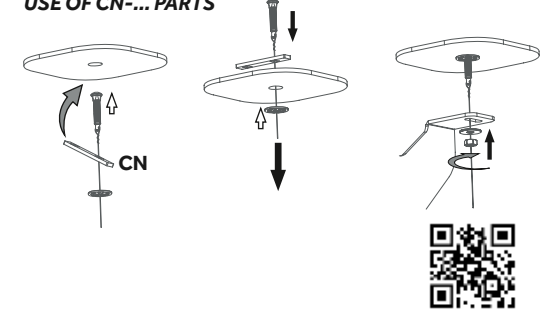

*9 Skd Qmq Premium için
CN-5 kullanılacaktır.

PACKAGE INCLUDED

1- CN-01 M8	2
2- CN-03 M8	6
3- M8 SPECIAL BOLT	8
4- CLAMPING PIECE	8
5- D8 WASHER	8
6- M8 HEX NUT	8
7- M6x15 LOCK HEADED BOLT	8
8- M6 HEX FLANGE NUT	8
9- CN-5 M8	2
10- D8 WASHER	8
11- M8x20 SQUARE BOLT	8
12- M8 FLANGE NUT	8


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

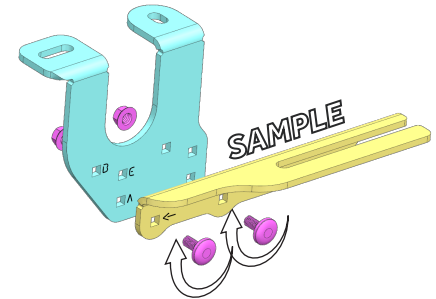

MB05163 / Rev.02 / 05.03.2024 (ECE)