TURTLE

FIRST TIME INSTALLATION

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB02081 (B TYPE)

COMPATIBLE VEHICLES

MBNZ METRS (W447) VAN 15-
MBNZ TOUR (W447) MPV 15-
MBNZ VCLS (W447) MPV 15-
MBNZ VIAN (W447) MPV 15-
MBNZ VIAN (W639) MPV 03-14
MBNZ VIT (W447) VAN 15-
MBNZ VIT (W639) VAN 03-14

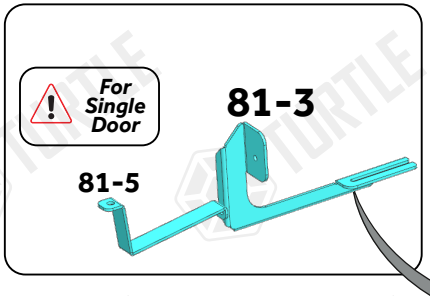

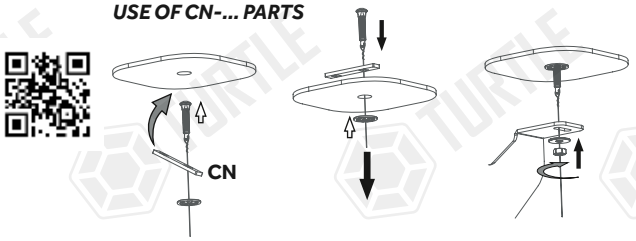

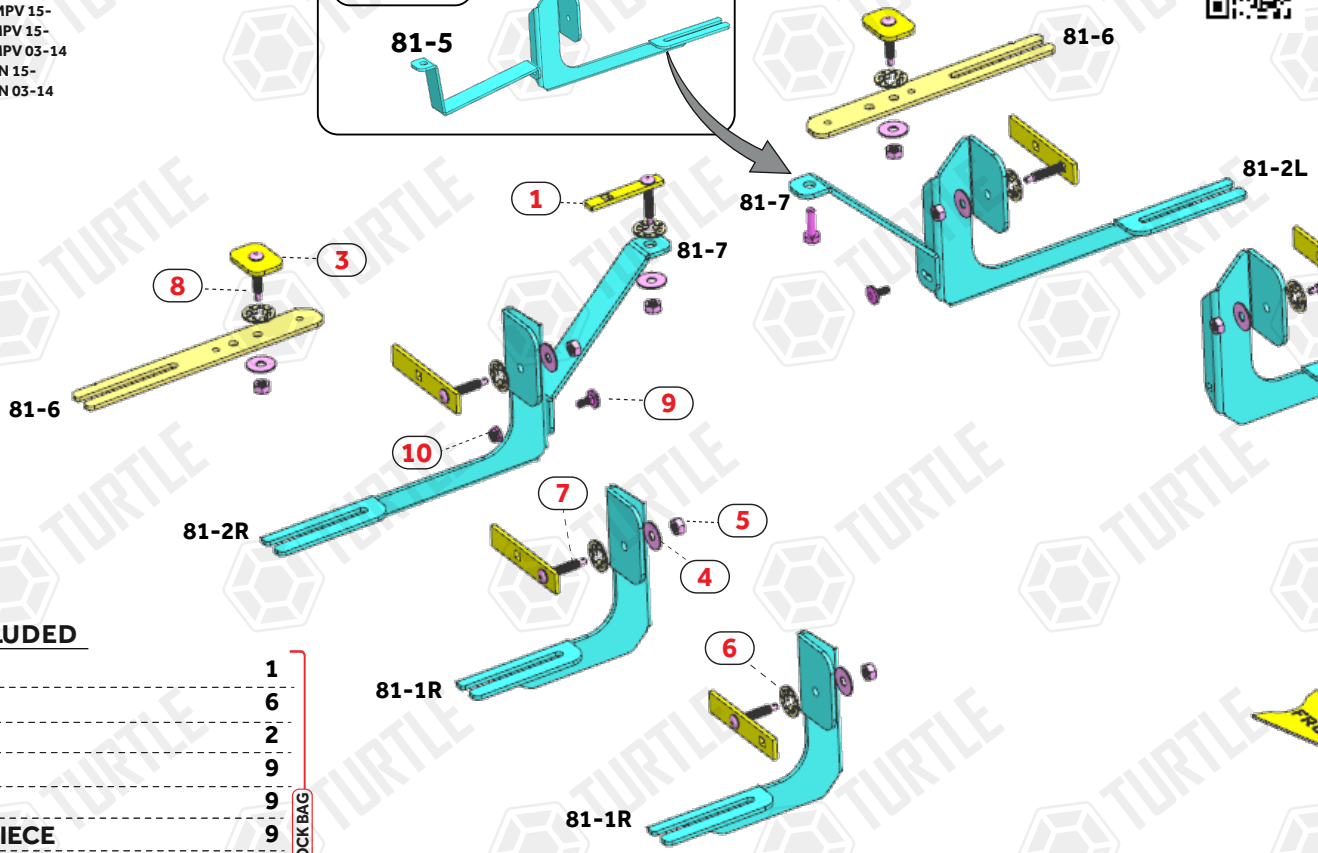

Aracınız tek kapılı ise;
sol orta bağlanıları bu şekilde uygulayınız.
If your vehicle has a single door;
apply left middle connetions like this.

PACKAGE INCLUDED

1-	CN-01 M8	1	ZIPLOCK BAG
2-	CN-03 M8	6	
3-	CN-05 M8	2	
4-	D8 WASHER	9	
5-	M8 HEX NUT	9	
6-	CLAMPING PIECE	9	
7-	M8 SPECIAL BOLT	7	
8-	M8x30 LOCK HEAD BOLT	2	
9-	M6x15 LOCK HEADED BOLT	2	
10-	M6 HEX FLANGE NUT	2	
11-	*D8 WASHER*	16	ZIPLOCK BAG
12-	*M8x20 SQUARE BOLT*	16	
13-	*M8 FLANGE NUT*	16	

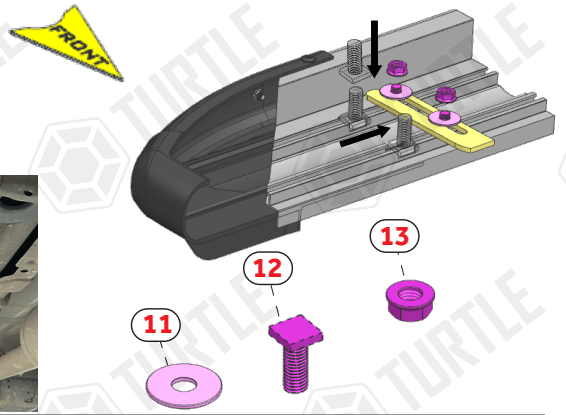

CAN OTOMOTİV İNŞ. İTH. İHR. SAN. VE TİC. LTD. ŞTİ.
Veliköy OSB 4. Cadde No:20/A Çerkezköy/TEKIRDAĞ
www.canotomotiv.com.tr / turtlecancarry.com / turtlecancarry.eu / turtlecancarry.com.tr
+90 282 746 1320 info@canotomotiv.com.tr

MB02081-MB03081 / Rev.00/ 24.11.2023 (ÖMER)